

# Dome Kettle

polished stainless steel body



B  
E  
L  
L  
I  
N  
I

BTDK120

# Important Safeguards

**When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:**

## For Your Safety

**Read all instructions carefully, even if you are familiar with the appliance.**

- To protect against the risk of electric shock, **DO NOT IMMERSE** any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the cord. Never carry the appliance by the cord.
- Do not operate any appliance with a damaged cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated oven).
- Do not use this appliance for anything other than its intended use. This product is intended for household use only.
- This appliance is intended to be plugged in a standard domestic power outlet only.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.

- Do not use outdoors.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided.
- The use of attachments or accessories not recommended or sold by the manufacturer can cause fire, electric shock or injury.
- Never insert utensils into the appliance.
- Caution should be taken when handling this appliance as some surfaces may be hot during and immediately after boiling. Severe burns may result from misuse.
- Allow to cool before cleaning.
- Do not use with an extension cord.
- Store the unit indoors in a dry location.
- Do not operate under or near flammable materials, such as curtains, drapes or any other combustible materials.
- This product has been designed to heat water only.
- **DO NOT OVER-FILL** as boiling water may be ejected. The maximum level is marked on the water level indicator.
- **DO NOT UNDER-FILL**. Ensure there is enough water in the kettle to cover the bottom.
- Avoid contact with steam from the spout when water is boiling, or just after the kettle has switched off. Take care when opening the lid for re-filling when the kettle has recently boiled, as steam can burn.
- Extreme caution is necessary when moving any appliance containing hot water. Wait until the appliance has switched off automatically, or switch it off manually before moving it.
- Do not lift the lid while boiling water in the kettle.
- Do not fill the kettle when the appliance is on the power base.
- The kettle must only be used with the power base provided.
- Do not place the power base onto a metal tray or metal surface while in use.

## ***Caution***

- Do not operate the kettle on an inclined surface.
- Do not move the kettle while it is switched on.
- To prevent damage to the appliance do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

FAILURE TO OBSERVE THESE CAUTIONS  
MAY RESULT IN DAMAGE TO THE KETTLE

## ***Compulsory Warning***

If the supply cord is damaged, the cord must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

## ***Save These Instructions***

# Features of Your Dome Kettle



# Getting to Know Your Dome Kettle

Congratulations on the purchase of your new Bellini Dome Kettle.

Before using your new dome kettle for the first time, it is extremely important that you read and follow the instructions in this booklet, even if you feel that you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

## How to use Your Dome Kettle

Before using your new dome kettle for the first time, carefully unpack the appliance and remove all the packaging material.

Fill the kettle to the maximum level indicated by the "MAX" water level mark on the water Level Indicator and boil the water. Drain this water thoroughly before using for the first time to ensure the kettle is completely clean.

## Operation

Remove the lid of the kettle and fill with water to the desired level. Take care not to fill above the "MAX" water level mark as water may eject from the kettle during boiling. Always fill using fresh water and discard any excess boiled water after use.

Replace the lid on the kettle.

Place the power base on a dry and level surface.

Place the kettle onto the power base.

Insert the power cord into a standard domestic power outlet and switch on.

Switch the kettle on by pressing the "On/Off" switch downwards. The power indicator light illuminates to indicate that the kettle is in use.

When the water has boiled, the kettle and the power indicator light will switch off automatically.

Water can be brought back to the boil by pressing the "On/Off" switch downwards again.

***If the kettle has recently boiled and switched off automatically, it may be necessary to wait for a maximum of 15 seconds before the switch can be reset.***

You can stop the boiling process at any time by gently lifting the "On/Off" switch to the "Off" position or by turning the power outlet off.

To remove the kettle from the power base, grasp the handle and hold the kettle upright while lifting it clear of the power base. Take extra care if the kettle is full.

Do not UNDER-FILL. Ensure the water covers the minimum level on the Water Level Indicator.

## Care and Cleaning

Before cleaning, turn off the power outlet and unplug the power cord from the mains supply.

Allow the Kettle to cool before cleaning it.

Wipe the exterior of the kettle with a soft damp cloth or sponge.

Remove stubborn spots using a cloth moistened with mild detergent. Do not use steel wool or abrasive cleaners. Do not put detergents or cleaning agents in the kettle.

Buff the polished stainless steel with a clean soft cloth.

Do not leave the kettle in direct sunlight as it may affect the quality of the finish.

### Removing Calcium Deposits

In order to maintain the performance of your kettle, it is important to remove built-up deposits inside the kettle. To descale your kettle you can use a descaler available from most leading retail outlets, or the following process:

1. Half fill the kettle with ordinary tap water.
2. Add 30ml (1oz) of white vinegar to the kettle.
3. Boil the mixture and leave standing for 30 seconds repeat this step twice.
4. Empty the mixture and rinse the kettle well.

**Note: For extreme build-up, this procedure may need to be repeated.**

The scale filter will also need to be cleaned occasionally to remove calcium deposits. To remove the scale filter, open the lid of the kettle and grasp the top of the scale filter located just above the spout. Slide the scale filter out of its holding slots and through the lid of the kettle.

The scale filter can be cleaned by using a soft bristled brush and running water or by soaking it in vinegar. Ensure the scale filter is rinsed thoroughly in clean water before returning it to the kettle.

Replace the scale filter by pushing it firmly back into its holding slots.

# *Notes*

# Warranty

The benefits conferred by this warranty are in addition to all implied warranties, other rights and remedies in respect of the product which the consumer has under the Trade Practices Act and similar State and Territory Laws.

The original purchaser of this Bellini product is provided with the following warranty, subject to the following conditions.

This product is warranted for a period of 1 year from the date of purchase for all parts defective in workmanship or materials. Should an instance occur where the product is deemed faulty, the product will need to be returned to the retailer where it was purchased to be replaced with the same product or product of equivalent value and type free of charge, or a refund issued. In order to obtain an exchange or a refund, proof of purchase must be presented to the retailer.

This warranty is in addition to all other rights and remedies available under the Trades Practices Act 1974 and other relevant State and Territory laws and shall not be taken as applying to exclude, restrict or modify such rights or remedies in any other matter whatsoever.

## WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.

5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

## DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

## RETAIN & FILE WITH YOUR RECEIPT

Your Purchase Receipt/Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or a refund.

GSM International Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from: \_\_\_\_\_

Co. Name: \_\_\_\_\_

Address: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

**NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.**

Cat. No. BTDK120  
November 2010

# G | S | M

Gerard Sourcing & Manufacturing

## GSM International Ltd.

GSM International Ltd has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028