


1.5 Litre Kettle



BTDK170P

DESCRIPTION OF KETTLE

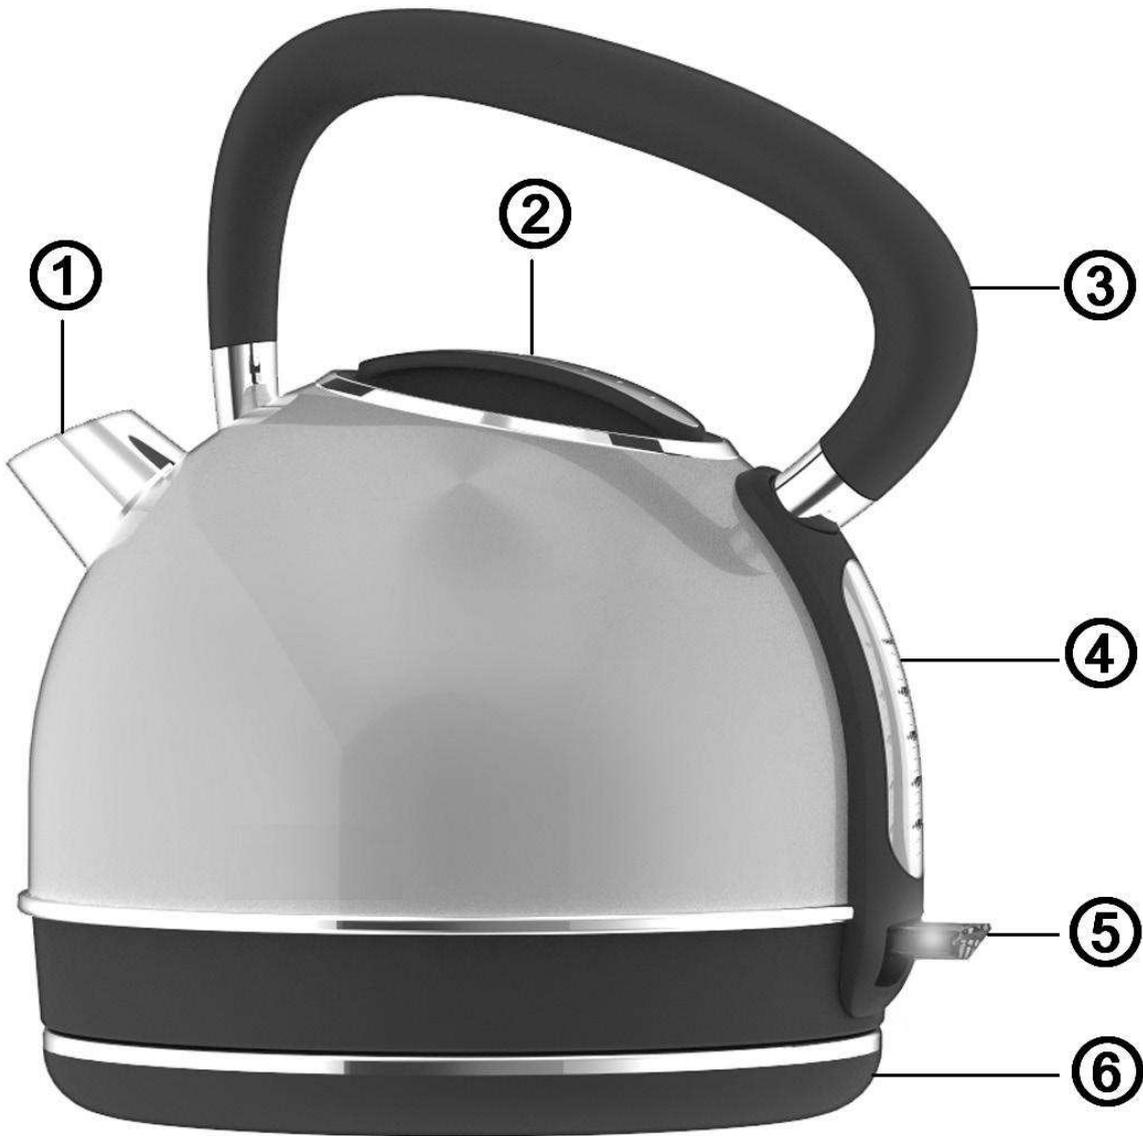

1. Spout
2. Lid
3. Handle
4. Water Level indicator
5. On/Off switch **I/O** with indicator lamp
6. Power Base

IMPORTANT SAFEGUARDS

When using this electrical appliance, the following basic safety precautions should always be followed:

1. Read all instructions before using.
2. Before connecting the kettle to the power supply, check that the voltage indicated on the appliance corresponds with the voltage in your home. If this is not the case, contact your local qualified technician and DO NOT use the kettle.
3. Use this kettle with the supplied base only.
4. If the supply cord or any part is damaged, cease use of this appliance immediately to avoid a hazard.
5. Unplug it from the power outlet when not in use.
6. Do not hang the power cord over the edge of table or allow the cord or the user to touch the external part of the enclosure after or during operation.
7. Place the appliance on the flat surface. Do not place on the heated surface or near a hot gas or electric burner or oven.
8. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
9. Children should be supervised to ensure that they do not play with appliance.
10. To protect against electric shock, do not immerse the cord, plug, power base and kettle in water or other liquid.
11. After boiling, please avoid touching the steam coming from the spout and avoid touching the external enclosure. Also, do not open the lid without allowing the appliance and water to cool.
12. Take care when pouring hot water.
13. This product is for boiling water only. Do not attempt to heat any other liquids.
14. Only use the handle when handling this appliance.
15. This appliance has been manufactured for the purpose of indoor, household use only. Do not use in a commercial or industrial environment. Never use it outdoors.
16. Take care when handling or moving this appliance when water is still in the container.
17. The use of any accessories or attachments that are not

recommended by the appliance manufacturer may result in fire, electric shock, personal injury or damage to this appliance or the customer's property.

18. When cleaning, allow the appliance to cool first then wipe with a slightly damp cloth.
19. Prior to operating this appliance, please ensure that the lid is properly closed.
20. Do not place this appliance on a metal surface.
21. Do not boil when the water level is below the minimum level mark, this will result in damage to the appliance.
22. **Do not overfill.** The water level must not exceed the maximum water level mark. If the kettle is overfilled, boiling water may be ejected.
23. Beware of steam coming from the spout or lid especially during refilling. Never remove the lid while the water is boiling.
24. **CAUTION:** Do not operate the kettle on an inclined plane. Do not move the kettle while it is switched on.
25. This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farm houses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
26. Save these instructions.

CAUTION

- Ensure that the kettle is switched off before removing it from its stand. The appliance must not be immersed.
- If the supply cord is damaged, it must be replaced by the manufacturer or similarly qualified persons in order to avoid a hazard.
- Always ensure that hands are dry before handling the plug or switching on the appliance.
- Always allow the appliance to cool before cleaning or storing.
- The base and exterior of the machine must not become wet.

OPERATION

It is recommended to operate the kettle several times following the below instruction and discard the boiled water before first use. This will remove any material or dust from the appliance, which may exist from the manufacturing process.

1. Open the lid and fill fresh cold water into the kettle. Then close the lid ensuring that it is closed correctly.

Caution: the filled water level must be between the “1.5L (MAX)” and “0.5L (MIN)” level as indicated on the housing. Failure to keep the water level within this range may damage the element, kettle components or water may eject from the appliance when boiling.

2. Replace the kettle on the Power Base and connect it to power supply. Position the kettle so that the spout of kettle is facing away from you and any other materials that could be damaged by hot steam.
3. Press the On/Off switch down and the lamp will be illuminated. Do not open the lid while the water is boiling.
4. The Power will cut off automatically and the switch will return to the OFF position when the water has boiled. The indicator lamp will switch off.
5. The boiling process can be terminated at any time by lifting the kettle off the base or by lifting the On/Off switch to the OFF (○) position.

CAUTION

- **Take care and keep the kettle level when removing it with boiled water, otherwise, hot water may be leaked and burn your body.**
- Never operate the appliance empty. If this occurs, the thermal cut-off inside the kettle would operate to cut off power automatically. Unplug the appliance and let it completely cool down if this occurs.
- If the kettle is filled above the maximum level mark, hot water may be ejected from the spout during boiling.
- Beware of steam coming from the spout or lid especially during refilling. Never open the lid when the kettle is boiling.
- The filter must be in place during operation.
- The kettle switches off automatically when the water has boiled. Now disconnect the kettle from the mains power supply. Always keep the lid closed when pouring the water out.
- **Beware of steam and scalding!**

CLEANING & MAINTENANCE

1. Remove the plug from wall outlet and let the appliance completely cool down before cleaning or descaling.
2. **Do not immerse power cord, kettle and power base in water or any other liquids.**
3. Clean the exterior surface of the kettle with a damp cloth and then polish with a soft dry cloth. Do not use steel wool pads or abrasive cleaners or harsh chemicals to wipe the housing.
4. Periodical descaling is needed. The interval of descaling depends on the quality of water in your living area and the frequency that you use the kettle.
5. Before removing or refitting the filter, switch off the kettle and empty it. Allow it to cool completely, and then unplug the power base from the mains supply socket. Never operate the kettle without the filter fitted. The Filter can be detached for easier cleaning simply by pulling it out and rinsing. Refit the filter back into the kettle.
6. The power cord can be wound around the bottom of the base for storage.
7. Do not attempt to dismantle the kettle or power base. No user serviceable parts inside it. In the event of a malfunction, contact your local qualified service technician for advice.

ELECTRICAL PARAMETER

- Voltage220-240V AC
- Power1850-2200W
- Frequency50Hz

FEATURES OF PRODUCT

- Rating Capacity: **1.5L**
- Steel body
- **Water level indicator**

NOTE: This kettle has an overheating protector in the kettle. In the event of overheating, such as operating without water in the kettle or the water being boiled-dry, the kettle will automatically shut down to prevent further damage.