

Presto Chopper

mini food processor



Bellini®

BTFP745

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- To protect against the risk of electric shock DO NOT IMMERSE the motor unit, plug or power cord into water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Never leave an appliance unattended when in use.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the power cord and never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug after the appliance malfunctions, or is dropped or damaged in any manner.
- Do not use outdoors.
- Store unit indoors in a dry location.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces. Do not operate or place any part of this appliance on or near a hot gas or electric burner or in a heated oven.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Operate on a level surface. Operating on sinks, drain boards or uneven surfaces must be avoided.
- Do not use any appliance for anything other than its intended use.
- This product is intended for household use only.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- Never use harsh, abrasive, caustic or oven cleaners to clean this appliance. Allow to cool before cleaning.
- Do not use this appliance with an extension lead.
- Do not operate underneath or near flammable materials, such as curtains or drapes or any other combustible material.
- Keep the appliance away from direct sunlight, humidity and sharp edges.
- Position the appliance at least 10cm from the wall, back and sides.
- This device is intended to be used for shredding, chopping up and grinding/grating fruit, vegetables, nuts, chocolate or hard cheese.
- This device is not suitable for chopping up extremely hard products (e. g. nutmegs, coffee beans or cereals).
- The device is not a meat grinder. The device is not suitable for chopping up meat.
- This device is for personal use only and is not intended for commercial applications.
- The device must only be used as described in the operating instructions. Any other use is deemed to be improper.
- Please keep the device and packaging material out of the reach of children and pets.
- There is a danger of injury and suffocation.
- Keep your head, hands, hair, jewellery and clothing away from rotating parts of the device.
- Do not reach into the feed tube to push food further down. Only use the pusher to push food further down.
- The blades and edges of the slicing/grating drums are sharp. Be careful when changing the slicing/grating drums.

- Switch off the device before inserting or removing the slicing/grating drums. Only ever grasp the slicing/grating drums by the plastic surfaces when you want to insert or remove the slicing/grating drums.
- Clean the device thoroughly before you first use it.
- The device should only be used when it is fully and correctly assembled!
- Switch off the device and pull the mains plug out of the plug socket before you change any slicing/grating drums or insert or remove the drum holder/feeding tube in order to prevent the device from accidentally switching on.
- Do not operate the device for more than two minutes without interruption.
- Do not force food into the feed tube.


Warning

If the power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of Your Presto Chopper

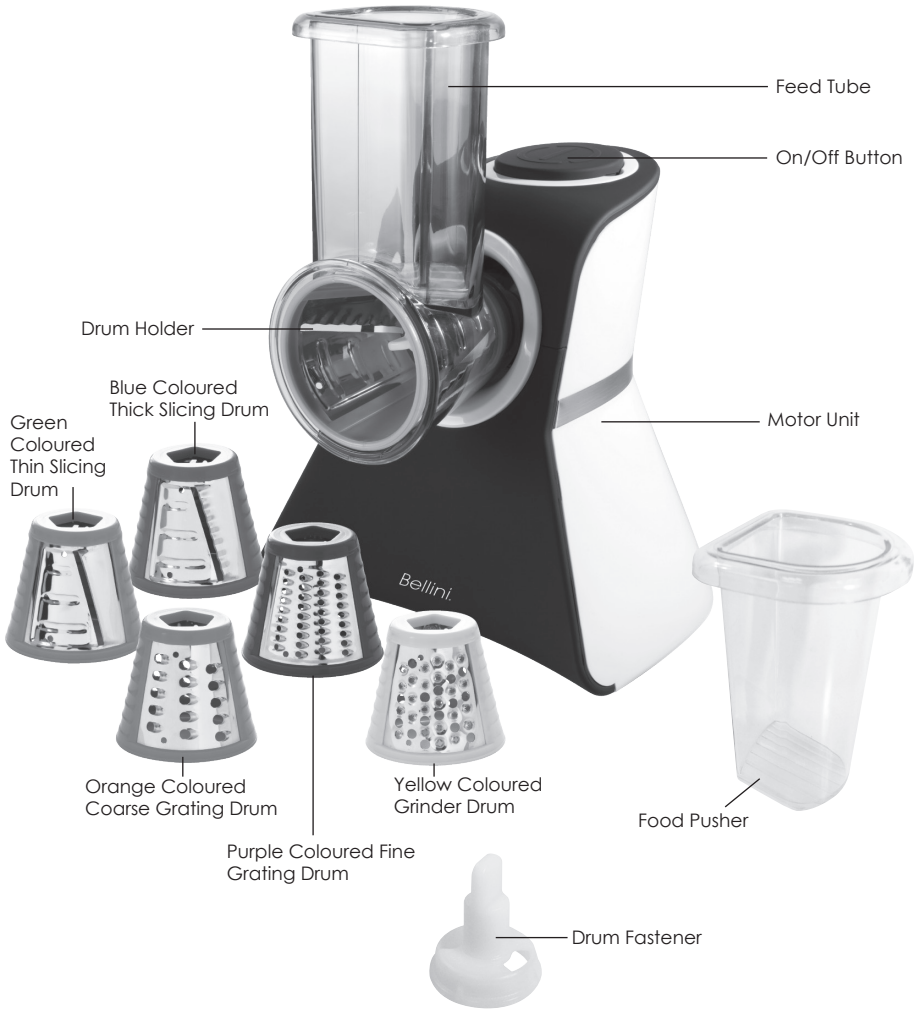

Accessories

Green coloured thin slicing drum

This drum is for cutting thin, smooth slices. It is recommended for slicing: carrots, zucchinis, potatoes, cucumbers, peppers, onions, turnips, red cabbage, white cabbage, apples or hard cheese.



Blue coloured thick slicing drum

This drum is for slicing thick, wavy slices. It is recommended, for slicing: carrots, zucchinis, potatoes, cucumbers, peppers, onions, turnips, red cabbage, white cabbage, apples or hard cheese.



Orange coloured coarse grating drum

This drum is suitable, for example, for coarse grating of: carrots, zucchinis, potatoes, peppers, hard cheese (e.g. Parmesan) or chocolate.



Purple coloured fine grating drum

This drum is suitable, for example, for fine grating of: carrots, zucchinis, hard cheese (e.g. Parmesan), chocolate or coconuts.



Yellow coloured grinder drum

This drum is suitable, for example, for grinding/ grating: hard cheese (e.g. Parmesan), chocolate, dry bread/rolls, hazelnuts, walnuts, almonds or coconuts.



Getting to Know Your Presto Chopper

Congratulations on the purchase of your new Bellini Presto Chopper.

Before first using your new Bellini Presto Chopper, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Before first use

Remove and safely discard any packaging material and promotional labels.

There may still be some production residues on the device. Clean the device thoroughly before you first use it.

Using the Presto Chopper


To achieve the best cutting results, we recommend that you chop the food up into smaller pieces before you place it into the feed tube. This will make it easier to push the food down the tube using the food pusher.

Inserting/Removing the drum holder/feeding tube


1. Hold the drum holder/feeding tube tilted slightly to the right and insert it into the motor unit.



2. Rotate the drum holder/feeding tube a quarter turn to the left until it engages.

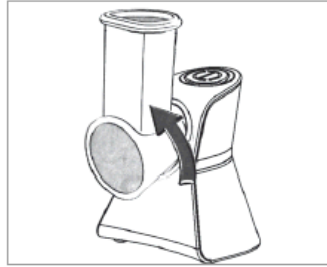


3. To release the drum holder/feeding tube from the drive shaft, rotate the drum holder/feeding tube a quarter turn to the right and remove it from the motor unit.

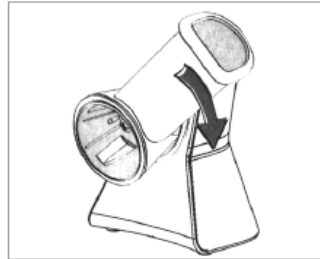


Inserting/Removing the slicing/grating drums

1. Select a suitable slicing/grating drum.
2. Insert the slicing/grating drum into the holder. Make sure that the slicing/grating drum is seated correctly on the drive shaft.

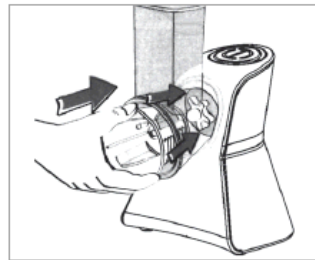

3. Place the drum fastener on the drive shaft. Make sure that the drum fastener is seated correctly on the drive shaft.

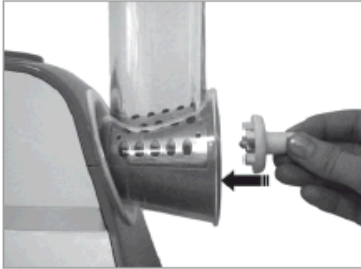

4. Turn the drum fastener to the left, to secure the slicing/grating drum.




5. In order to remove the slicing/grating drum, turn the drum fastener to the right to release the drum fastener.
6. Remove the drum fastener.
7. Remove the slicing/grating drum.



Operation

1. Place the appliance on a level, non-slip surface.
2. Connect the appliance to a standard domestic power outlet.
3. Place a bowl beneath the opening of the drum holder/feeding tube in order to catch your food.
4. Switch on the device by holding down the On/Off button. Press the On/Off switch briefly one to two times before you place any food into the feed tube so that the cutter slicing/grating drums locks on the drive shaft of the motor unit.
5. Then hold down the On/Off switch and place the food which is to be cut up into the feed tube.

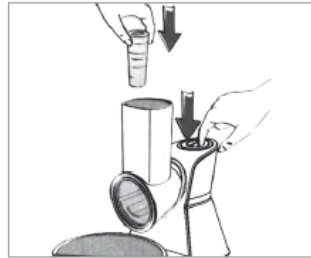

6. Use the food pusher to push food further down.



Warning: Do not use your hand to push food further down into the feed tube. Only use the food pusher to push food.

7. When you have finished using your Presto Chopper, press the On/Off button to switch off the appliance.
8. Remove the mains plug from the socket after use.
9. Remove the slicing/grating drums after use.
10. Clean the device and the accessory parts after each use.

Note: Do not operate the device for more than two minutes without interruption.

Care and Cleaning

1. Switch off and unplug the Presto Chopper from the power outlet.
2. Wipe down the motor unit with a damp cloth. Then dry the device with a dry cloth.
3. Clean the drum holder/feeding tube, the slicing/grating drums, the drum fastener and the food pusher with clear, warm water and a little mild detergent or clean them in the dishwasher.
4. Store the device in a dry place that is not accessible to children and animals.

Warning:

Do not use abrasive cleaners or scouring pads.

Do not immerse the main unit, plug and cord in water.

Be careful when handling the slicing/grating drums; the blades are sharp!

Use The Slicing/Grating Drums Recommended For Each Type of Food

	Orange Coloured Coarse Grating Drum	Purple Coloured Fine Grating Drum	Blue Coloured Thick Slicing Drum	Green Coloured Thin Slicing Drum	Yellow Coloured Grinder Drum
Carrots	X	X	X	X	
Zucchini's	X	X	X	X	
Potatoes	X		X	X	
Cucumber			X	X	
Pepper	X		X	X	
Onions			X	X	
Beets			X	X	
Cabbage (White/Red)			X	X	
Apples			X	X	
Parmesan Cheese					X
Chocolate	X	X			X
Dry Bread/ Biscuits					X
Hazelnuts/ Walnuts/Almonds					X
Coconuts		X			X

Troubleshooting

Problem	Possible Cause/Solution
The device does not work.	<ul style="list-style-type: none"> Is the plug inserted in the mains socket correctly. Is the mains socket defective, try another mains socket. Are you holding down the On/Off switch, To switch on the device, you must hold down the switch.

Notes

Notes

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028

Cat. No. BTFP745
June 2012