

# Retro Breakfast Pack

brushed stainless steel exterior



bellini

**BTT200**

# Important Safeguards

**When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:**

## For Your Safety

***Read all instructions carefully, even if you are familiar with the appliance.***

- NEVER INSERT A KNIFE OR ANY OTHER UTENSIL INTO THE TOASTER. Doing so could cause damage to the Toaster and is a serious safety hazard.
- Contact with the elements inside the Toaster could result in electric shock. To free broken or burnt toast, unplug the Toaster from the power outlet and turn it upside-down.
- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the cord. Never carry the appliance by the cord.
- Do not operate any appliance with a damaged cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the cord to hang over the edge of a table or counter, or touch hot surfaces.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided.

- Do not touch the hot surfaces of this appliance. Do not touch the metal body of the Toaster during or immediately after operation, as it will be hot. Severe burns may result from misuse.
- Do not use this appliance for anything other than its intended use. This product is intended for household use only.
- Do not use with an extension cord.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated oven).
- Allow to cool before cleaning or storing.
- Do not use outdoors.
- Store the unit indoors in a dry location.
- Do not attempt to repair, disassemble or modify the appliance. There are no user serviceable parts.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Do not cover bread slots while the Toaster is in use.
- Do not operate the Toaster without bread.
- Do not attempt to heat metal or foil packages in the Toaster.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

## Compulsory Warning

If the supply cord is damaged, the cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

## Save These Instructions

# Features of Your 2 Slice Toaster



# Getting to Know Your 2 Slice Toaster

Congratulations on the purchase of your new Bellini 2 Slice Toaster.

Before using your new 2 Slice Toaster for the first time, it is extremely important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are familiar with this type of appliance.

In particular, please pay close attention to the section entitled IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

# How to Use Your 2 Slice Toaster

Before using the appliance for the first time, carefully unpack and remove all packaging material.

Plug the Toaster into a standard domestic power outlet and switch the power outlet on.

Adjust the variable browning control to the desired toast colour setting. Choose a setting based on the type of bread you are toasting and your personal preference. Start on a medium setting (3-4) and adjust the variable browning control to a lighter setting (1-2) or darker setting (5-6).

**Note: The condition of the bread will determine how quickly it toasts. Dry or stale bread toasts faster than fresh bread.**

Place bread into the bread slots and press the lever down until it locks into position.

**Note: The lever will not lock into position if the Toaster is not plugged into a power outlet or if the power outlet is not switched on.**

When toasting is completed, the toast will pop up and the Toaster will switch off automatically. Toasting may be interrupted during the cycle by pushing the cancel button. Toasting will stop and the toast will pop-up.

Allow the Toaster 15 to 20 seconds to cool before beginning the next toasting cycle. This permits the electronically controlled thermostat to reset for the next toasting cycle.

**Note: Do not touch the Toaster walls when the Toaster is in use.**

## Reheat button

Toast can be reheated by placing cold toast in the bread slots, lowering the lever and pressing the reheat button. The reheat light will come on and the toast will be reheated over a short, fixed period of time.

**Note: When using the reheat function, keep a close eye on the bread to ensure it doesn't burn.**

## Cancel function

The toasting cycle can be stopped at any stage by pressing the cancel button. The toast will pop up and the Toaster will switch off automatically.

## Defrost function

The defrost function is useful for thawing and toasting frozen bread all in one operation. Adjust the variable browning control to the desired toast colour setting. Start on a medium setting (3-4) and adjust the variable browning control to a lighter setting (1-2) or darker setting (5-6) depending on your personal preference.

Place bread or crumpets into the bread slots.

Press the lever down to the locked position and press the defrost button. The defrost light will illuminate.

When thawing and toasting is complete, the toast will automatically pop-up and the Toaster will switch off automatically.

# Care and Cleaning

Switch off the power outlet and unplug the Toaster; ensuring you let the Toaster cool before cleaning.

Wipe over the exterior of the Toaster and power cord with a soft damp sponge or cloth.

Do not use abrasives or strong household cleaners, as they will damage the stainless steel finish.

The crumb trays will need to be cleaned occasionally. The crumb trays slide out for easy removal of breadcrumbs.

**Note: Do not try to clean the inside of the Toaster, as this may damage the heating elements. Water and liquids must never enter the Toaster.**

# Notes

# Notes

# Warranty

The benefits conferred by this warranty are in addition to the consumers guarantees and other rights and remedies in respect of the product which the consumer has under the Australian Consumer law.

The original purchaser of this Bellini product is provided with the following warranty, subject to the following conditions.

This product is warranted for a period of 1 year from the date of purchase for all parts defective in workmanship or materials. Should an instance occur where the product is deemed faulty, the product will need to be returned to the retailer where it was purchased to be replaced with the same product or a refund issued. In order to obtain an exchange or a refund, proof of purchase must be presented to the retailer.

This warranty is in addition to all other rights and remedies available under the Australia Consumer Law and other laws and shall not be taken as applying to exclude, restrict or modify such rights or remedies in any other matter whatsoever.

## WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.

5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

## DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

## RETAIN & FILE WITH YOUR RECEIPT

Your Purchase Receipt/Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or a refund.

GSM International Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from: \_\_\_\_\_

Co. Name: \_\_\_\_\_

Address: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

**NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.**

Cat. No. BTT200  
June 2011

# G | S | M

Gerard Sourcing & Manufacturing

## GSM International Ltd.

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028