

2 Slice Retro Toaster



bellini®

BTT400C

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- NEVER INSERT A KNIFE OR ANY OTHER UTENSIL INTO THE TOASTER. Doing so could cause damage to the Toaster and is a serious safety hazard.
- Contact with the elements inside the Toaster could result in electric shock. To free broken or burnt toast, unplug the Toaster from the power outlet and turn it upside-down.
- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the power cord. Never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided.

- Do not touch the hot surfaces of this appliance. Do not touch the metal body of the Toaster during or immediately after operation, as it will be hot. Severe burns may result from misuse.
- Do not use this appliance for anything other than its intended use. This product is intended for household use only, and not for commercial, industrial or outdoor use. Do not use this appliance in any manner or with any other accessories that are not recommended within this instruction manual. Doing so may cause fire, electric shock or injury.
- A short power-supply cord is provided to reduce the risk of tripping or entanglement. Do not use with an extension power cord.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated oven).
- Allow to cool before cleaning or storing.
- Do not use outdoors.
- Store the unit indoors in a dry location.
- Do not attempt to repair, disassemble or modify the appliance. There are no user serviceable parts.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Do not cover bread slots while the Toaster is in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Do not operate the Toaster without bread.
- Do not attempt to heat metal or foil packages in the Toaster.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.
- Do not operate under or near flammable materials, such as curtains, drapes or any other combustible materials.
- Do not allow bread crumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard.

- Do not leave the appliance unattended when it is in use. Always unplug it from the mains socket when it is not in use and before cleaning. Keep this unit out of the reach of the children.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. To prevent fire or shock hazard. Do not expose this appliance to rain or moisture.
- Do not use the toaster without the removable sliding crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Do not attempt to dismantle or repair this unit yourself. Repairs should only be performed by qualified personnel in order to avoid a hazard.
- This appliance must be earthed. Only connect it to a suitable earthed AC 240V~50Hz mains socket.
- This appliance is intended to be used in household and similar applications such as:
 - Staff kitchen areas in shops, offices and other working environments;
 - Farmhouses;
 - By clients in hotels, motels and other residential type environments;
 - Bed and breakfast type environments.
- The enclosure of the toaster, including the immediate surroundings of the bread slots, may become very hot during toasting. Do not attempt to touch these areas during, or within 10 minutes after the toasting process. This could result in physical injury. When in doubt, disconnect the appliance from the mains outlet and allow it to cool for at least 10 minutes.
- Do not cover this appliance while in use.

cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Never attempt to extract jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the appliance to first cool down, then unplug and carefully remove the bread.

Caution - bread may burn. When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dish towels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem. An insulated heat pad is recommended.

Do not immerse it in water or other liquid or use it near washbasins or sinks. Do not use it if hands are wet.

Save These Instructions

Warning

If the supply power cord is damaged, the power

Features of Your 2 Slice Toaster



Getting to Know Your 2 Slice Toaster

Congratulations on the purchase of your new Bellini 2 Slice Toaster.

Before using your new 2 Slice Toaster for the first time, it is extremely important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are familiar with this type of appliance.

In particular, please pay close attention to the section entitled IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Before Using For The First Time

Ensure the above safety precautions are understood.

1. Carefully unpack the appliance and remove all the packaging materials attached to your toaster.
2. Read the manual and carefully follow the instructions.
3. Always use the appliance with a power outlet of the same voltage (A.C. only) as marked on the bottom of unit.
4. Check that the removable crumb tray is correctly locked underneath the toaster.
5. Unwind the supply cord completely. Connect to the mains wall outlet.

First Time Use

1. Before using for the first time, set the **Browning Control** to "2" position without inserting any bread.
2. Press the **High lift / bread release lever** down until it clicks into place to turn on the toaster. Using it for the first time without bread will remove any unpleasant odours from the new appliance.

How to Use Your 2 Slice Toaster

Plug the Toaster into a standard domestic power outlet and switch the power outlet on.

Adjust the variable browning control to the desired toast colour setting. Choose a setting based on the type of bread you are toasting and your personal preference. Start on a medium setting (3-4) and adjust the variable browning control to a lighter setting (1-2) or darker setting (5-6).

Note: The condition of the bread will determine how quickly it toasts. Dry or stale bread toasts faster than fresh bread.

Place only 1 slice of bread into each of the toasting slots. Ensure the bread slices are not too large or thick to fit in the slots.

Press the **High lift / bread release lever** down until it clicks into place. Toasting cycle will automatically commence.

Note: The lever will not lock into position if the Toaster is not plugged into a power outlet or if the power outlet is not switched on.

When toasting is completed, the toast will pop up and the Toaster will switch off automatically. Toasting may be interrupted during the cycle by pushing the cancel button. Toasting will stop and the toast will pop-up.

Allow the Toaster 15 to 20 seconds to cool before beginning the next toasting cycle. This permits the electronically controlled thermostat to reset for the next toasting cycle.

Note: Do not touch the Toaster walls when the Toaster is in use.

Note: The lift lever is held down to test the anti-jam operation, the unit requires about 60 – 80 seconds cool-down period before used again.

The high lift facility makes it easier to remove the toast. When toasting is complete, press the lowering lever upward and remove the toast from the toaster.

Warning: Do not leave it unattended when it is in use as toast may jam or wedge in the bread carriage.

Caution: Do not use a knife or another sharp metal tool to remove bread from the toaster and do not touch the metal internal parts of the toaster.

Reheat button

Toast can be reheated by placing cold toast in the bread slots, lowering the lever and pressing the reheat button. The reheat light will come on and the toast will be reheated over a short, fixed period of time.

Note: When using the reheat function, keep a close eye on the bread to ensure it doesn't burn.

Cancel function

The toasting cycle can be stopped at any stage by pressing the cancel button. The toast will pop up and the Toaster will switch off automatically.

Defrost function

The defrost function is useful for thawing and toasting frozen bread all in one operation. Adjust the variable browning control to the desired toast colour setting. Start on a medium setting (3-4) and adjust the variable browning control to a lighter setting (1-2) or darker setting (5-6) depending on your personal preference.

Place bread or crumpets into the bread slots.

Press the lever down to the locked position and press the defrost button. The defrost light will illuminate.

When thawing and toasting is complete, the toast will automatically pop-up and the Toaster will switch off automatically.

Care and Cleaning

Note: Please read and follow the Care and Cleaning instructions supplied

Switch off the power outlet and unplug the Toaster; ensuring you let the Toaster cool before cleaning.

Wipe over the exterior of the Toaster and power cord with a soft damp sponge or cloth.

Do not use abrasives or strong household cleaners, as they will damage the stainless steel finish.

The crumb trays will need to be cleaned occasionally. The crumb trays slide out for easy removal of breadcrumbs.

Note: Do not try to clean the inside of the Toaster, as this may damage the heating elements. Water and liquids must never enter the Toaster.

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.

Specifications

Power Supply.....AC 220~240V~50Hz

Power Consumption.....850~1050W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.

Notes

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.

Caf. No. BTT400C
October 2014