

# 4 Slice Toaster

countdown Toaster



©  
i  
n  
i  
i  
e  
B

**BTT680**

# Important Safeguards

**When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:**

## For Your Safety

***Read all instructions carefully, even if you are familiar with the appliance.***

- NEVER INSERT A KNIFE OR ANY OTHER UTENSIL INTO THE TOASTER. Doing so could cause damage to the Toaster and is a serious safety hazard.
- Contact with the elements inside the Toaster could result in electric shock. To free broken or burnt toast, unplug the Toaster from the power outlet and turn it upside-down.
- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the power cord. Never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided.

- Do not touch the hot surfaces of this appliance. Do not touch the metal body of the Toaster during or immediately after operation, as it will be hot. Severe burns may result from misuse.
- Do not use this appliance for anything other than its intended use. This product is intended for household use only.
- Do not use with an extension power cord.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated oven).
- Allow to cool before cleaning or storing.
- Do not use outdoors.
- Store the unit indoors in a dry location.
- Do not attempt to repair, disassemble or modify the appliance. There are no user serviceable parts.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.
- Do not cover bread slots while the Toaster is in use.
- Do not operate the Toaster without bread.
- Do not attempt to heat metal or foil packages in the Toaster.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

## Warning

If the power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

## Save These Instructions

# Features of Your Bellini 4 Slice Toaster



# Getting to Know Your Bellini 4 Slice Toaster

Congratulations on the purchase of your new Bellini 4 Slice Toaster.

Before using your new 4 Slice Toaster for the first time, it is extremely important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are familiar with this type of appliance.

In particular, please pay close attention to the section entitled IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

# How to Use Your Bellini 4 Slice Toaster

Before using the appliance for the first time, carefully unpack and remove all packaging material.

Plug the Toaster into a standard domestic power outlet and switch the power outlet on.

Place bread into the bread slots and press the lever down until it locks into position.

**Note: The lever will not lock into position if the Toaster is not plugged into a power outlet or if the power outlet is not switched on.**

Adjust the variable browning control to the desired toast colour setting. Choose a setting based on the type of bread you are toasting and your personal preference. Start on a medium setting (4-6) and adjust the variable browning control to a lighter setting (1-3) or darker setting (7-9).

**Note: The condition of the bread will determine how quickly it toasts. Dry or stale bread toasts faster than fresh bread.**

After setting the variable browning control, the toaster commences operation, 5 blue LED lights count down gradually to indicate the toasting progress.

When toasting is completed, the toast will pop up and the Toaster will switch off automatically. Toasting may be interrupted during the cycle by pushing the Cancel button. Toasting will stop and the toast will pop-up.

Allow the Toaster 15 to 20 seconds to cool before beginning the next toasting cycle. This permits the electronically controlled thermostat to reset for the next toasting cycle.

**Note: Do not touch the Toaster walls when the Toaster is in use.**

## Reheat Button

Toast can be reheated by placing cold toast in the bread slots, lowering the lever and pressing the reheat button. The reheat light will come on and the toast will be reheated over a short, fixed period of time.

**Note: When using the reheat function, keep a close eye on the bread to ensure it doesn't burn.**

## Cancel Function

The toasting cycle can be stopped at any stage by pressing the Cancel button. The toast will pop up and the Toaster will switch off automatically.

## Defrost Function

The defrost function is useful for thawing and toasting frozen bread all in one operation. Adjust the variable browning control to the desired toast colour setting. Start on a medium setting (4-6) and adjust the variable browning control to a lighter setting (1-3) or darker setting (7-9) depending on your personal preference.

Place bread or crumpets into the bread slots.

Press the lever down to the locked position and press the defrost button. The defrost light will illuminate.

When thawing and toasting is complete, the toast will automatically pop-up and the Toaster will switch off automatically.

## Care and Cleaning

Switch off the power outlet and unplug the Toaster; ensuring you let the Toaster cool before cleaning.

Wipe over the exterior of the Toaster and power cord with a soft damp sponge or cloth.

Do not use abrasives or strong household cleaners, as they will damage the brushed chrome finish.

The crumb trays will need to be cleaned occasionally. Push the crumb tray inward, it will pop out for easy removal of breadcrumbs. After cleaning, push it back to lock into position.

**Note: Do not try to clean the inside of the Toaster, as this may damage the heating elements. Water and liquids must never enter the Toaster.**

# Notes

# Notes

**G | S | M**

Gerard Sourcing & Manufacturing

**GSM International Ltd.**

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.  
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



**N1028**

Cat. No. BTT680  
July 2012