

# Bellini

## INSTALLATION & OPERATION INSTRUCTIONS



**60cm/90cm Automatic Slide  
Out Range hood**

**Model No**

**BR603AX** FINELINE: 5102305 AUS ONLY

**BR603AX-F**

**BR903AX** FINELINE: 5102306 AUS ONLY

**BR903AX-F**

# Thank you

Thank you for choosing Bellini Appliances.

Bellini prides itself on 'affordable living' making sure there is no compromise in your favourite room ... The Kitchen

All Bellini appliances carry a 3 year In Home warranty, be sure to retain your installation and user manual and receipt.

For all warranty and technical queries please contact

**1300 373 199**

# Content


Safety instructions-----	2
Product description-----	4
Operation Mode -----	5
Installation-----	6
Start using your Range hood-----	11
Maintenance and cleaning -----	12
Warranty-----	13

## Safety instructions

This manual explains the proper installation and use of your oven, please read it carefully before using even if you are familiar with the product. The manual should be kept in a safe place for future reference. In case of failure, only the Authorised Technical Service may repair this range hood. Otherwise the guarantee will be null and void. All Bellini Appliances are for domestic use only.

### Never to do:

- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Never carry out flammable cooking under the appliance
- The exhaust from the range hood must not be discharged into any heating flue, which may carry combustion products from other sources.

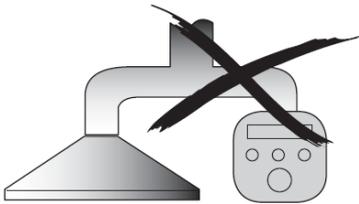

- Do not leave lit gas burners exposed due to the risk of fire.



- This range hood is not recommended for barbecues.

### Always to do:

- Packaging materials (eg; polystyrene and plastic items) must be kept out of reach of babies or young children at all times due to risk of suffocation.
- Young children should be supervised to ensure that they do not play with the appliance.
- Ensure the range hood is switched off before carrying out maintenance, to avoid any possibility of electric shock.
- Grease filters must be removed every four weeks (maximum) for cleaning to reduce the risk of fire.
- There must be adequate ventilation of the room when the range hood is used at the same time as appliances burning gas or other fuels.
- Always cover lit gas burners with pots or pans when range hood is in use.
- Always switch off gas burners before you remove pots or pans.
- If the supply cord is damaged, the cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- Plug must be accessible after installation.

## Safety instructions

### Never to do:

- This range hood cannot be installed for outdoor use.
- It is prohibited to fit the range hood over a solid fuel stove
- This appliance must not be connected to a chimney or vent flue which is in use.
- This appliance is not to be vented into the roof cavity, must exit into open air.
- Exhaust air must not be discharged into a wall cavity, unless the cavity is designed for the purpose.
- This appliance should not be connected to ducting which ventilates rooms with fire places.

### Always to do:

- Attention should be given to ensure that any applicable regulations concerning discharge of exhaust air are fulfilled.
- This appliance should be installed and maintained by a suitably qualified and competent person in accordance with the relevant safety regulations.
- Before connecting the appliance to the mains supply, ensure that the voltage and frequency details on the rating plate are consistent with the source of supply.




 
 
 
This product must not be disposed together with domestic waste. This product has to be disposed at an authorised place for recycling of electrical and electronic appliances.

By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.



## Product description

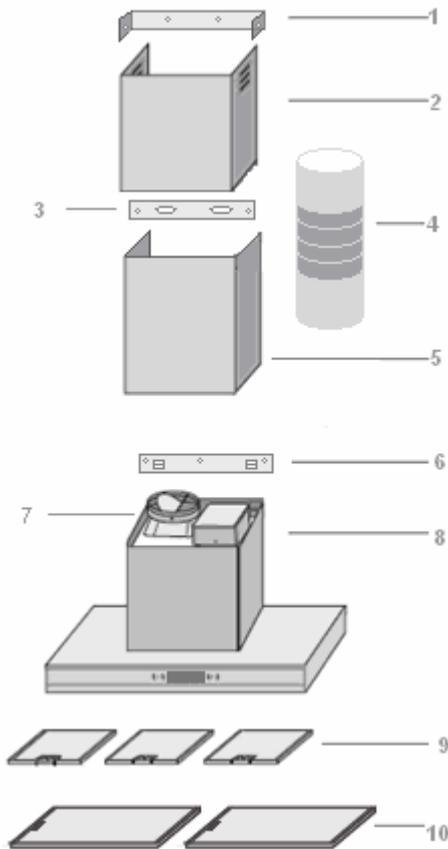

Accessories bag		
Description	Picture	QTY
User Manual		1
1:1 installation guide template		1
Upper chimney retaining bracket		1
Lower chimney retaining bracket		1
Hood mount bracket		1
Outlet ( diameter 150mm)		1
Dry wall anchors plugs		9
Screw (ST4x8mm)		8
Screw (ST4x40mm)		7
Screw (ST4x30mm)		2

### Component list:

1. Upper chimney retaining bracket
2. Upper decorative chimney (Inner)
3. Lower chimney retaining bracket
4. Flexible exhaust duct
5. Lower decorative chimney (outer)
6. Hood mount bracket
7. Outlet (diameter 150mm)
8. Main body
9. Grease mesh filter for BR603/903AX(-F)


### Technical data:

Power supply: 220 – 240v, 50Hz  
 Motor: 190W  
 Lights: 2x20W Halogen lamp  
 Length of power cord: 2m  
 Air outlet diameter: 150mm

## Operation Mode

Your range hood can be operated in two modes, choose the mode suitable for your kitchen before installation.


### Air Extraction

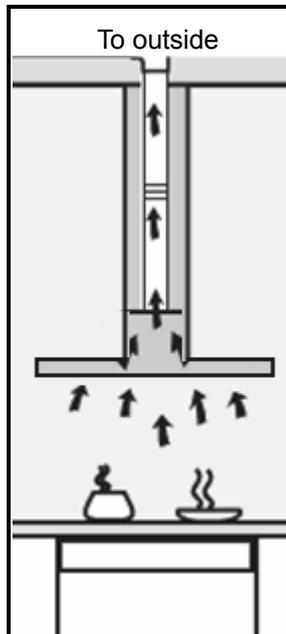

For air extraction mode, a ducting kit is required, the air is drawn in and cleaned by the grease filters and via the ducting must be directed to the outside atmosphere.

**Ducting must be vented to outside atmosphere**

### Air Recirculation

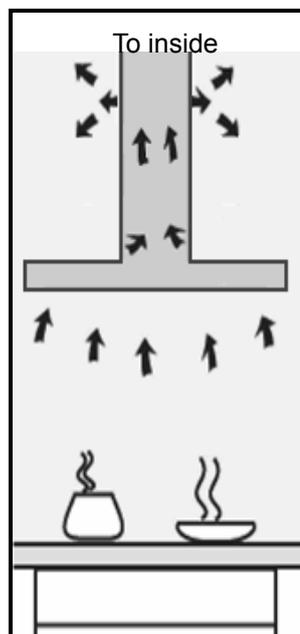


For air recirculation mode, charcoal filter (Optional Accessory) must be installed to eliminate cooking smells.

The air is drawn in and cleaned first by the grease filters and then charcoal filter. The cleaned air is then re-circulated back into kitchen through vents in the *Upper Decorative Chimney*.

## Installation

### Dimensions:

BR603AX(-F)/BR903AX(-F)

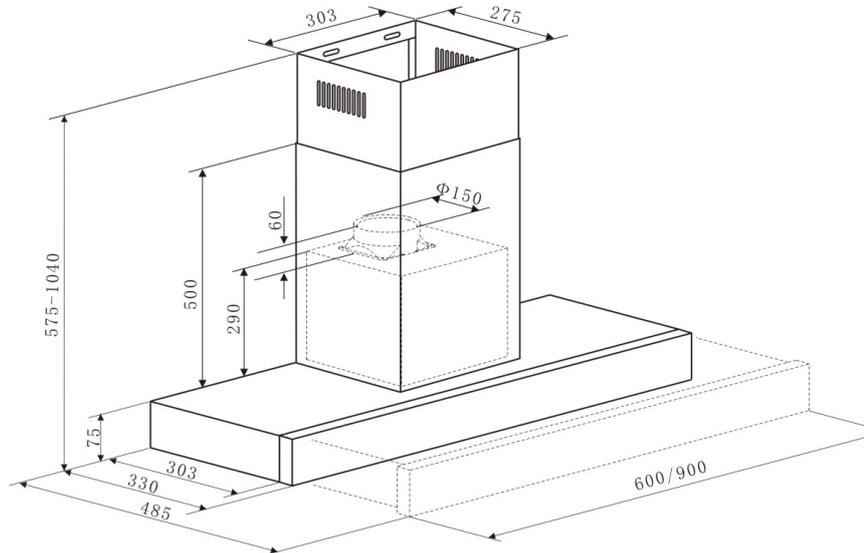

\*Width of BR603AX(-F) is 600mm, width of BR903AX(-F) is 900mm

### Installation:

#### Warning:

Check that the installation complies with the standards of local building, gas and electrical authorities. Before connecting to the mains supply ensure the mains voltage corresponds to the voltage on the appliance rating plate inside the range hood.

When installing the range hood, make sure you adhere to the minimum and maximum distances from the range hood base to the cooktop hob surface.


#### Hints for exhaust duct installation

The following rules must be strictly followed to obtain optimal air extraction

- Keep exhaust duct short and straight
  - Do not reduce the size or restrict exhaust duct
  - When using flexible duct always install the duct pulled taut to minimize pressure loss
  - Failure to observe these basic instructions will reduce the performance and increase noise levels of the range hood
- Ensure the exhaust ducting selected for installation complies with relevant standards and is fire retardant.


- Using a spirit level, mark a vertical line on the wall (Central to the cook top installed below) to indicate the centre location of the hood and a horizontal line where the hood base will be positioned.

**NOTE: The distance from the horizontal line to an electrical cooktop underneath must be minimum of 600mm & 650mm Free space to the gas cook top and a maximum height of 800mm (refer to table below).**

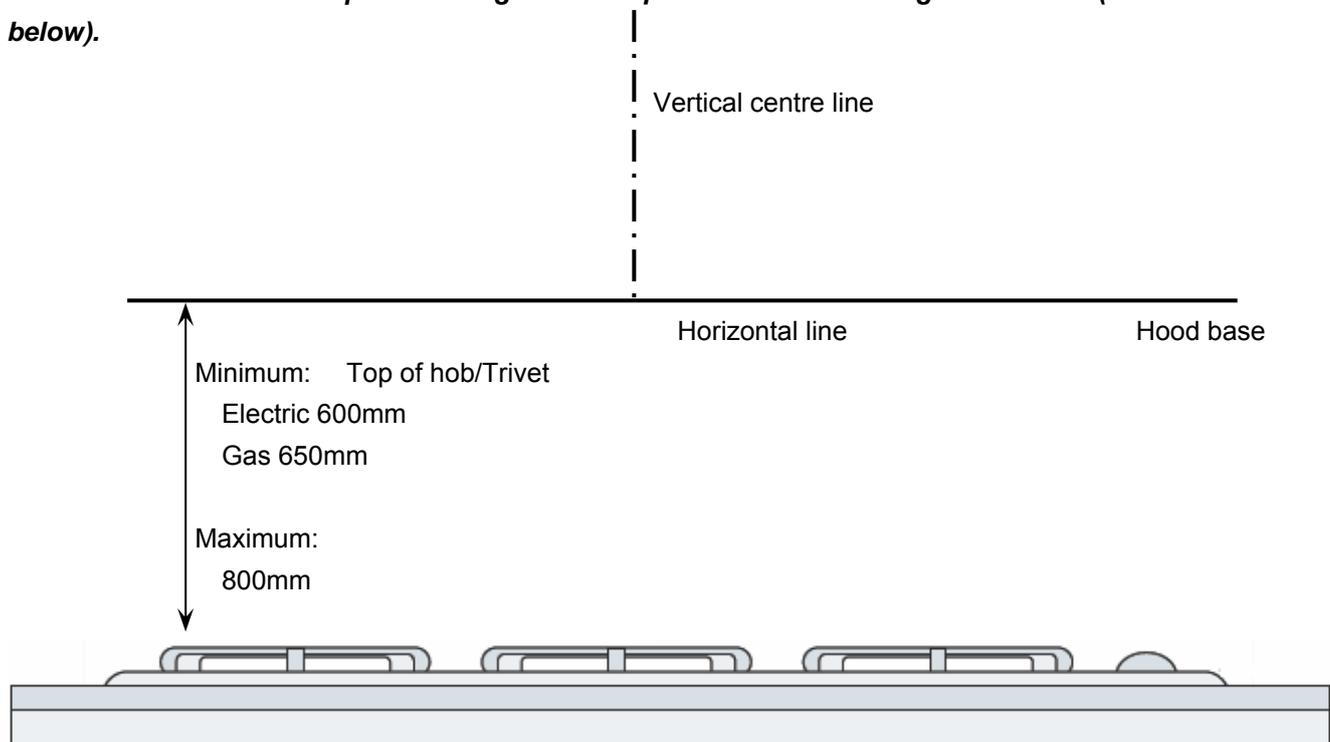


\*If the instructions of the hob specify a greater distance than the minimum above, then that shall be the minimum height for installation

- Use the *installation guide template* to determine where screw mount holes should be located. Make sure vertical and horizontal lines on the *installation guide template* superimpose with the lines just drawn on the wall.
- According to the positions just marked as per *installation guide template*, drill holes in the wall and fit *dry wall anchor plugs* into holes.
- Fit the *outlet* on the top of range hood body and retain with *4pcs ST4x8mm screws*.

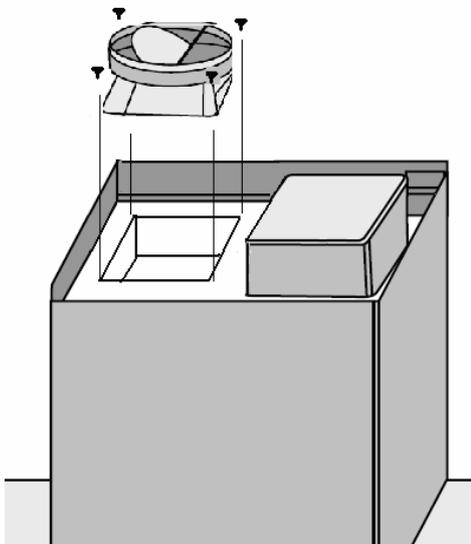


5. Fit the *flexible exhaust duct* onto *outlet*. ( *Air Extraction mode only* )

Note : For the *Air Circulation Mode* option , skip step 5 and proceed with step 6.

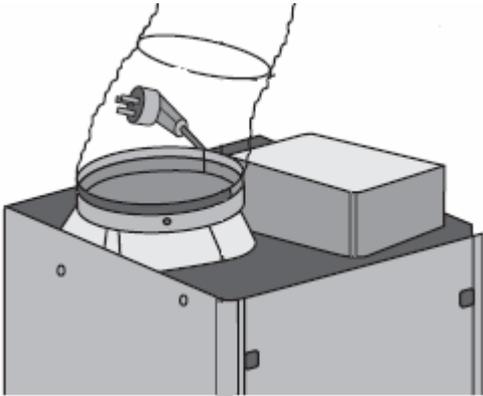

6. Place *Upper Decorative Chimney* inside the *Lower Decorative Chimney*.

Connect the *Lower Chimney retaining bracket* to the *Lower Decorative Chimney* with 2 x *ST4x8mm* screws, do not fully tighten, allowing for sufficient clearance to telescopically adjust the *Upper Decorative Chimney* to the desired position when installation is completed.

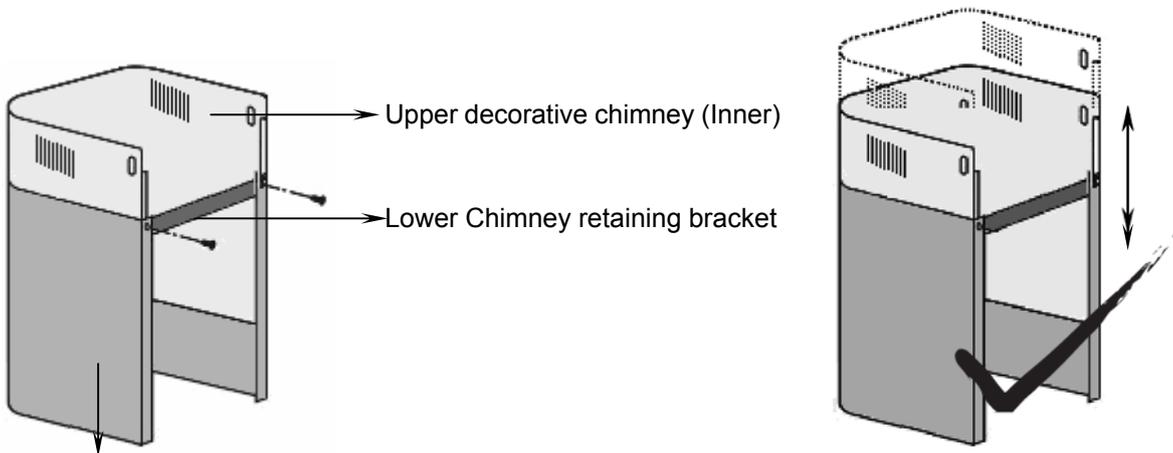


Lower decorative chimney (Outer)


7. Install active Charcoal Filters ( *Air Recirculation Mode only* )

Note: For *Air Extraction Mode* option, skip Step 7 and proceed with Step 8.


- 1) Remove the lower and upper chimney sections from the main body of the hood.
- 2) Use a screwdriver to undo the screws that hold the motor access panel in place.

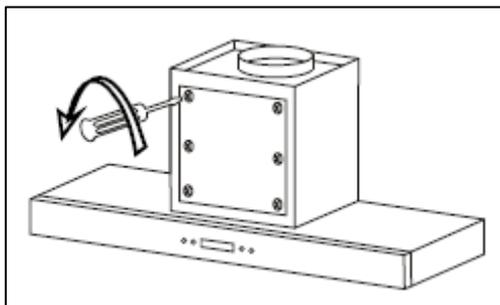


3) Once the motor access panel is removed, you will be able to see the motor.

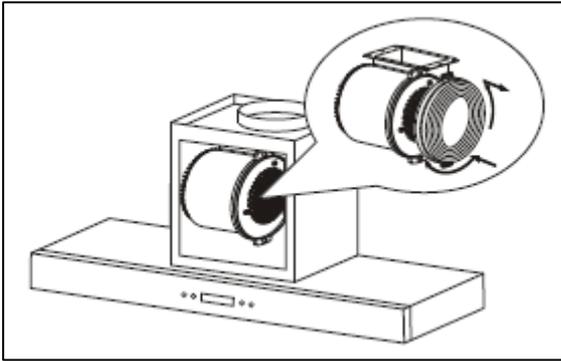

4) Hook the carbon filter over the pins that are located at the end of the motor.

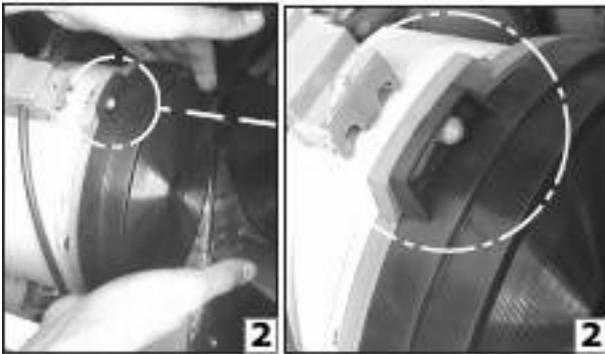


5) Turn the carbon filter anticlockwise, until you feel it click into place.

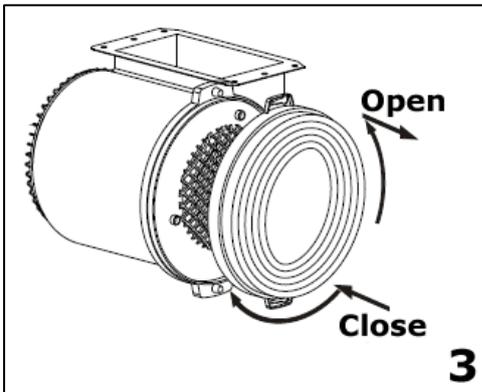


- o Repeat this process for the second carbon filter. You need to place a carbon filter at either end of the motor.
- o Refit the motor access panel and fully tighten the screws that you removed previously.
- o Refit the lower and upper chimney sections to the main body of the hood.
- o The carbon filters should be replaced every 3 - 6 months, if they show signs of damage or if you start to smell cooking odours returning into the kitchen through the vent at the top of the chimney section.

*Charcoal Filters are available at your local Bunnings  
Part Number: CF160 Fineline:5103075*

8. Secure the *hood mount bracket* onto wall with 3 x ST4x40mm screws, making sure screws are securely tightened.
9. Position the hood assembly onto the *Hood Mount Bracket*, ensuring that bracket hooks are securely interlocking into the mounting slots of the hood assembly.

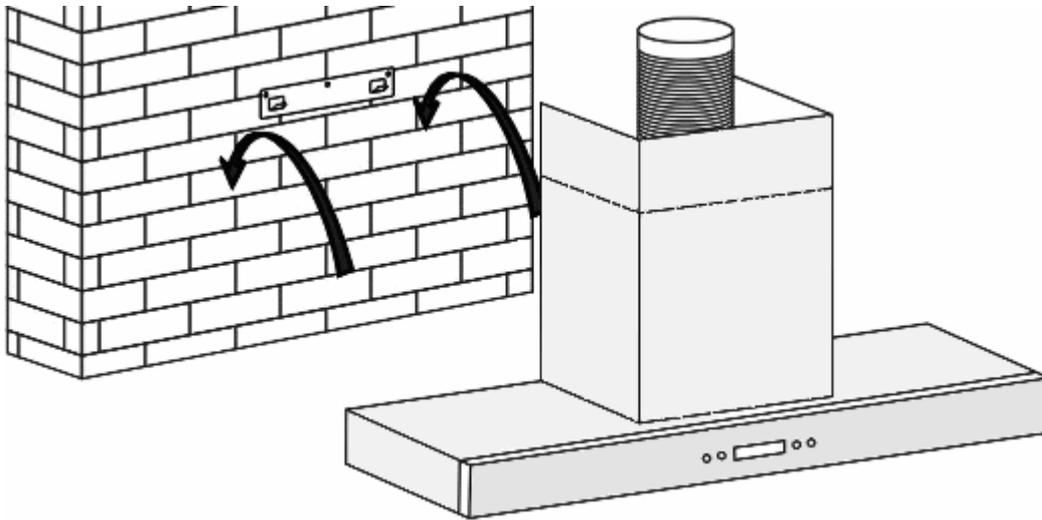


10. Secure the base of the hood with 2 x ST4x30mm anti-tilt screws to ensure unit is installed level, mounting holes for the screws are accessible via the fan motor chamber.
  11. Fasten the *Lower Chimney retaining bracket* to the wall with 2 x ST4x40mm screws.
  12. Plug into the main power supply.
  13. Position the *Upper Chimney retaining bracket* at the extended height of the decorative chimney and secure to the wall with 2 x ST4x40mm screws.
- \* Total maximum extension height of BR603AX and BR903AX is 980mm, each chimney height is 500mm.
14. Extend the *Upper decorative chimney* to the desired height and secure it with 2 x ST4 x 8mm screws to the *chimney retaining bracket*.

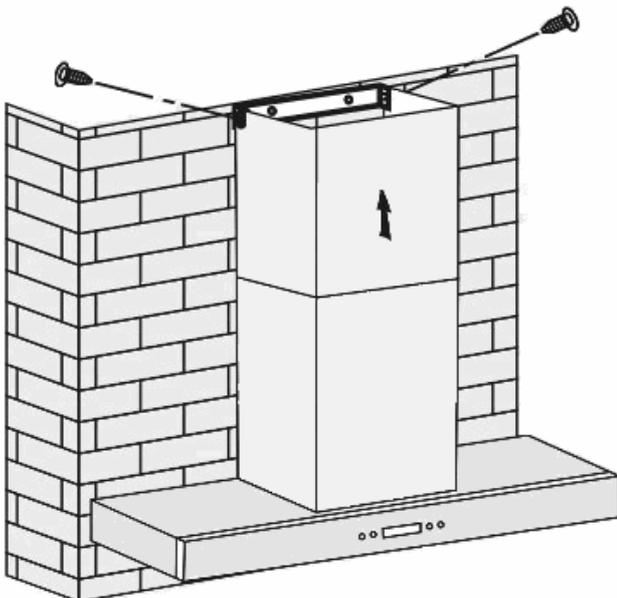

15. Remove all blue protective film on chimney and cooker hood, the installation is now finished.

## Start using your range hood

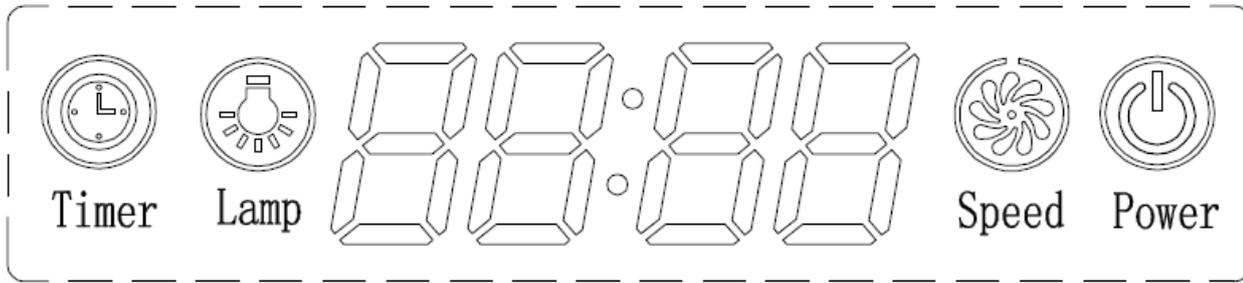

**Timer** – Clock time setting, auto off

### Clock time setting

1. Depress “Timer” for 2 to 5 second, hour digit segment will flash, depress “Speed” to increase and “Lamp” to decrease hour digit until current clock hour time appears.
2. Depress “Timer” again, minute digit segment will flash, depress “Speed” to increase and “Lamp” to decrease minute digit until current clock minute time appears.
3. Depress “Timer” again to confirm and finalize clock time setting

### Auto off duration setting

At the end of cooking if the timer is switched on, the range hood will continue to run for an additional duration as you set up to remove any odors that remain at the completion of cooking. After the set up duration the range hood will turn itself OFF. This function is available only when range hood motor is running.

1. Depress “Timer” to enter into this function, default setting is 5:00 min, you can depress “Speed” to increase and “Lamp” to decrease and adjust the duration from 1:00 to 60:00 min.
2. Depress “Timer” again to confirm and finalize auto off duration setting

\*Your range hood can remember the last setting, so if no new settings next time, the function will be on according to the last setting.

**Lamp** – Turn on/off light, decrease digit in timer setting

**Speed** –select speed to suit cooking conditions, increase digit in timer setting

Low – light frying/boiling

Medium – frying/wok cooking/heavy boiling

High – grilling, intensive frying and wok cooking

**Power** – Turn on/off the range hood.

**\* For BR603AX(-F)/903AX(-F), turn on the range hood, drawer will slide out automatically; turn off the range hood, drawer will slide in automatically.**

## Maintenance and cleaning

### Caution:

- Before maintenance or cleaning is carried out, the range hood should be disconnected from the main power supply. Ensure that the range hood is switched off at the wall socket and the plug removed.
- External surfaces are susceptible to scratches and abrasions, so please follow the cleaning instructions to ensure the best possible result is achieved without damage.

### GENERAL

Cleaning and maintenance should be carried out with the appliance cold especially when cleaning. Avoid leaving alkaline or acid substances (lemon juice, vinegar etc.) on the surfaces.

### STAINLESS STEEL

The stainless steel must be cleaned regularly (e.g. weekly) to ensure long life expectancy.

Dry with a clean soft cloth. A specialized stainless steel cleaning fluid may be used.

NOTE: Ensure that wiping is done along with the grain of the stainless steel to prevent any unsightly crisscross scratching patterns from appearing.

### CONTROL PANEL SURFACE

The inlay control panel can be cleaned using warm soapy water. Ensure the cloth is clean and well wrung before cleaning. Use a dry soft cloth to remove any excess moisture left after cleaning.

### Important

**Avoid using harsh cleaning chemicals, strong household detergents or products containing abrasives as this will affect the appliance appearance and potentially remove any printing of artwork on the control panel and will void manufactures warrantee**


### GREASE MESH FILTERS

The mesh filters can be cleaned either by hand or in

the dishwasher. After cleaning ensure that the filters are completely dry before refitting.

- By hand: Soak in warm water and a neutral washing up liquid. For stubborn grease stains use a soft nylon brush or sponge to help remove these stains. (Leave to dry naturally out of direct sun light)
- In a dishwasher: Ensure that placement of the filters is made so as to not impede the function of the spray arm. Washing the filters in a dishwasher may cause discoloration of the aluminum inner mesh over time although it will not affect their performance. Filters should be washed separately to crockery and kitchen utensils. it is advisable not to use rinse aid.

### Replace Lamp

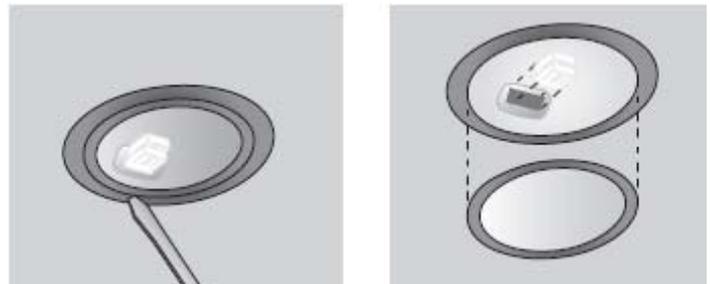

Using a small flat blade screwdriver remove the inner stainless steel ring to obtain access to the halo gen globe.

When removing the inner ring, do so carefully so not damage the range hood, as the glass lens could easily fall out of the inner ring. Remove halogen globe, whilst cool, and replace carefully with a new globe. The range hood takes 2 x 20W, 12 volt halogen globes.

### Important

When handling globes hold with a cloth or gloves to ensure perspiration does not come in contact with the globe as this can reduce the life of the globe.

## WARRANTY

- 1.1 In this warranty:
- 1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;
  - 1.1.2 **Company** means GSM Retail Australia Pty Ltd ABN 53 007 682 475 of 142-144 Fullarton Road, Rose Park SA 5067. Telephone 1300 373 199. Email [admin@gsmretailaust.com.au](mailto:admin@gsmretailaust.com.au);
  - 1.1.3 **Consumer** means a “consumer” as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Bellini product;
  - 1.1.4 **Consumer Guarantees** means the guarantees under the Australian Consumer Law;
  - 1.1.5 **You** means the Consumer.
- 1.2 Nothing in this warranty affects any person’s rights under the Australian Consumer Law. The benefits to any Consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.
- 1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Bellini product will be free of manufacturing defects and will perform to the Company’s specifications.
- 1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Bellini product which is installed in a domestic household area.
- \*The in Home warranty does not apply to Commercial and or industrial usage. \*Please See 1.7.7 for additional information*
- 1.5 This warranty commences on the date of purchase of the Bellini product by the Consumer and continues for the benefit only of the Consumer until the expiry of three (3) year **(Warranty Period)**.
- 1.6 If within the Warranty Period a manufacturing defect is discovered in the Bellini product or it fails to perform to the Company’s specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, repair the Bellini product or supply a replacement Bellini product free of charge. A replacement Bellini product may differ from the original product purchased by the Consumer.
- 1.7 This warranty will not apply to any Bellini product:
- 1.7.1 Installed by any person other than a qualified tradesperson; or
  - 1.7.2 Subjected to misuse, neglect, negligence or accidental damage; or
  - 1.7.3 Operated in any way contrary to any operating or maintenance instructions; or
  - 1.7.4 Improperly handled, installed or maintained; or
  - 1.7.5 Altered or modified prior to or after installation; or
  - 1.7.6 Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply
  - 1.7.7 Industrial and or Commercial usage is inclusive of staff areas in office/ shop environments, hotel/ motel or other similar accommodation or rental type properties including Bed and Breakfast establishments.

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

***Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.***

**IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY THE CONSUMER  
MUST CALL 1300 373 199 (AUSTRALIA) OR 0800 764 912  
(NEW ZEALAND) TO CONNECT TO THE NEAREST AUTHORISED CENTRE**

- 1.8 You must provide proof of your purchase of the Bellini product and the date of purchase in order to obtain the benefit of this warranty.
- 1.9 If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Bellini product for service nor the service agent's traveling costs to and from your home.
- 1.10 If you are required to transport the Bellini product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Bellini product prior to it being received by the Company or its service agent.
- 1.11 You will be responsible for all costs of returning a Bellini product to the Company and for redelivery of the Bellini product by the Company (whether it is the original or a repaired and/or a replacement Bellini product) and for any other expenses you incur in claiming under this warranty.
- 1.12 The Company or its service agent will examine any Bellini product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Bellini product in accordance with this warranty.

#### **DO NOT SEND IN THIS WARRANTY**

Fill out the following details and file with your purchase invoice.

#### **RETAIN & FILE WITH YOUR RECEIPT**

Your Purchase Receipt/Invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

GSM Retail Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from:

Co. Name:

Address:

Date of Purchase:

Serial number:

**NOTE:** Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown.

**FOR WARRANTY SERVICE CALL 1300 373 199 (AUSTRALIA)  
OR 0800 764 912 (NEW ZEALAND) TO CONNECT YOU TO THE NEAREST  
AUTHORISED SERVICE CENTRE**

