

Bellini

INSTALLATION & OPERATION INSTRUCTIONS



60cm Ceramic Cooktop

Model No.

BCA64CGP-W
BCA64CGP-F
BCA64CGP

FINELINE: 0081478

***Builders Pack BPA12EC FINELINE:**

BCA64EGP-W
BCA64EGP-F
BCA64EGP

***Builders Pack Only in BPA22EC FINELINE:**

Thank you

Thank you for choosing Bellini Appliances.

Bellini prides itself on 'affordable living' making sure there is no compromise in your favourite room ... The Kitchen

All Bellini appliances carry a 3 year In Home warranty, be sure to retain your installation and user manual and receipt.

For all warranty and technical queries please contact

1300 373 199

Content

2-3.....	Safety instructions
4-7.....	Installation
7-8.....	Description of the Ceramic hob surface layout
8-11.....	Using the ceramic hob
12.....	Hob guidelines
13-14.....	Maintenance and cleaning
15.....	Trouble shooting
15.....	Environmental note

Safety instructions

This User Instruction Manual contains important information, including safety & installation points, which will enable you to get the most out of your appliance. Please keep it in a safe place so that it is easily available for future reference; for you or any person not familiar with the operation of the appliance.



Caution!

- Do not use the ceramic hob until you have read this instruction manual. The ceramic hob is intended for household use only.
- The appliance becomes hot during operation. Take care not to touch the hot surface.
- Always keep children away from the ceramic hob.
- While in operation direct contact with the ceramic hob may cause burns!
- Ensure that small items of household equipment, including connection leads, do not touch the hob as the insulation material of this equipment is usually not resistant to high temperatures.
- Do not leave the ceramic hob unattended when frying. Oils and fats may catch fire due to overheating or boiling over.
- Do not switch on the hob until a pan has been placed on it.
- Do not put pans weighing over 25kg on the hob.
- Do not use the ceramic hob in the event of a technical fault. Any faults must be fixed by an appropriately qualified and authorized person.
- In the event of any incident caused by a technical fault, disconnect the power and report the fault to the service centre to be repaired.
- The rules and provisions contained in this instruction manual should be strictly observed. Do not allow anybody who is not familiar with the contents of this instruction manual to operate the ceramic hob.
- The ceramic hob should not be cleaned using steam cleaning equipment.
- **IMPORTANT:** Panels and furniture lining of the kitchen cabinet receiving the cooktop must be treated with temperature resistant adhesives 95°C (otherwise they may become discoloured or deformed due to inadequate temperature resistance)
- Any damage caused by the appliance being installed in contravention of this temperature limit, or by placing adjacent cabinet materials closer than 4mm to the appliance, will be the liability of the owner.

Child Safety

- We strongly recommend that babies and young children are prevented from being near to the appliance and not allowed to touch the appliance at any time.
- If it is necessary for younger family members to be in the kitchen, please ensure that they are kept under close supervision at all times.

General Safety

- Children should be supervised to ensure that they do not play with the appliance..
 - This appliance is not intended for use by person(including children) with reduced physical,sensory or mental capabilities or lack of experience and knowledge,unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.
 - **WARNING:** Danger of fire: do not store items on the cooking surfaces.
 - Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.
 - Do not allow electrical fittings or cables to come into contact with areas on the appliance that get hot.
 - Do not use the appliance to heat the room it is located in or to dry clothing.
 - Do not install the appliance next to curtains or soft furnishings.
 - If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
 - The appliance is not intended to be operated by means of an external timer or separate remote-control system.
 - This product can be worked but not through outside timer and remote control.
 - **Warning:** If the surface is cracked, switch off the appliance to avoid the possibility of electric shock, for hob surfaces of glass ceramic or similar material which protect live parts.
- **Warning:** a steam cleaner is not be used.
 - **CAUTION:** The cooking process has to be supervised. A short term cooking process has to be supervised continuously.
 - **WARNING:** Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire.
 - This appliance should be connected to a circuit which incorporates an isolating switch which can accessible by the user after installation providing full disconnection from the power supply. The disconnection may be achieved by incorporating a switch in the fixed wiring in accordance with the wiring rules.
 - **Warning:** Before obtaining access to terminals, all supply circuits must be disconnected.
 - **WARNING:** Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.
 - **WARNING:** The appliance and its accessible parts become hot during use.
 - Care should be taken to avoid touching heating elements.
 - If a stationary cooktop is not provided with a supply cord and a plug or by other means of disconnection from the supply having an air gap contact the separation in all active (phase) conductors, the instructions shall state that such means for disconnection shall be incorporated in the fixed wiring according to the wiring rules.


Installation

Installing the ceramic hob

- The kitchen area should be dry and aired and equipped with efficient ventilation. When installing the ceramic, easy access to all control elements should be ensured.
- This is a Y-type design built-in ceramic, which means that its back wall and one side wall can be placed next to a high piece of furniture or a wall. Coating or veneer used on fitted furniture must be applied with a heat-resistant adhesive (95°C). This prevents surface deformation or detachment the coating. Hoods should be installed according to the manufacturer's instructions.


Assembly of ceramic hob :

- Make an opening with the dimensions given in the diagram for the hob to be mounted on the worktop .
- Check seal for perfect fit and overall cover. Lower the ceramic hob into place and align correctly.
- Using a standard screwdriver, tighten the tension clamps evenly starting at the centre and moving diagonal, until the built-in rim is tight on the worktop.

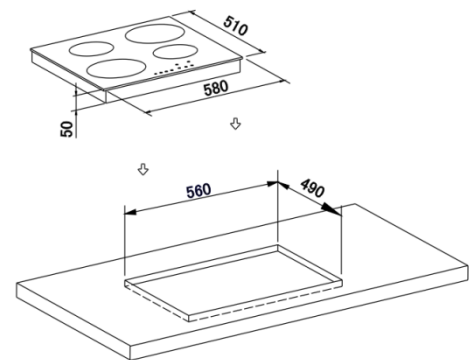


Cut a hole in the worktop that corresponds with the drawing shown above.

- **IMPORTANT:** You must observe the ventilation requirements shown in the drawing opposite.
- **IMPORTANT:** There are ventilation holes around the outside of the hob. YOU MUST ensure that these holes are not blocked by the work top, when you put the hob into position (see drawing opposite).
- **IMPORTANT:** Do not use a silicon sealant to seal the appliance against the aperture. This will make it difficult to remove the hob from the aperture in future, particularly if it needs to be serviced.

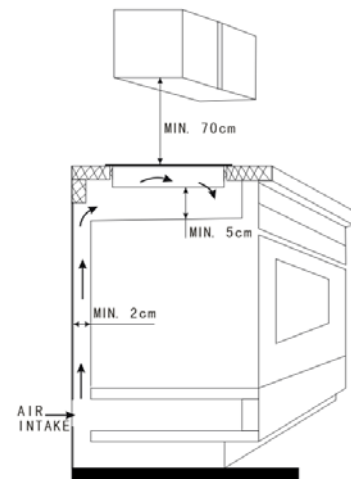


- Carefully turn the hob back over and then gently lower it into the aperture hole that you have cut out.
- There are holes on the base or the sides of the hob that you can fix the four brackets to. There are three holes in each one of the brackets.
- You should place the bracket on the underneath of the hob, in a position that is appropriate for the aperture that you have cut out. Using the screws provided, fix

the bracket to the hob. These screws MUST be securely tightened. Depends on different models, there may be 4-5 pieces of brackets for the hob.

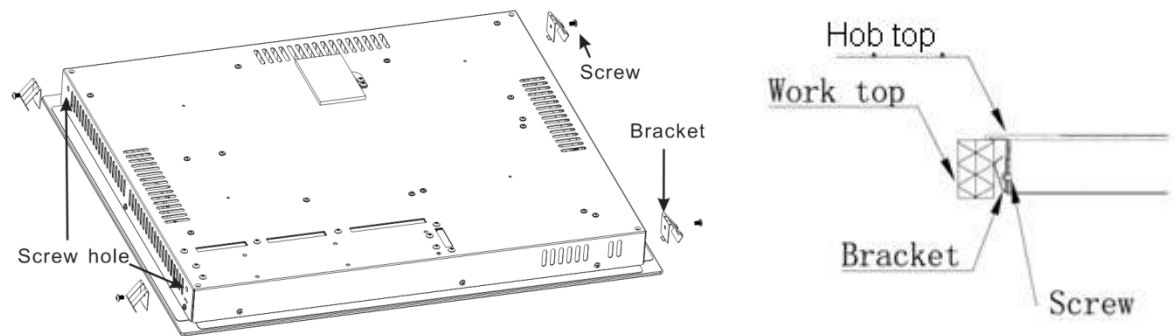


Fitting guidelines



The ceramic hob is manufactured to work with one-phase alternating current. The voltage rating of the ceramic hob heating elements is 220-240V. Adapting the ceramic hob to operate with two-phase current is possible by appropriate bridging in the connection box according to the connection diagram below. The connection diagram is also found on the cover of the connection box. Remember that the connection wire should match the connection type and the power rating of the ceramic hob.

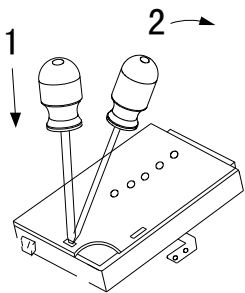

The connection cable must be secured in a strain-relief clamp.

Warning!


Remember to connect the safety circuit to the connection box terminal marked with . The electricity supply for the ceramic hob must have a safety switch which enables the power to be cut off in case of emergency. The distance between the working contacts of the safety switch must be at least 3mm. Before connecting the ceramic hob to the power supply it is important to read the information on the data plate and the connection diagram.

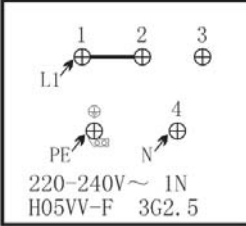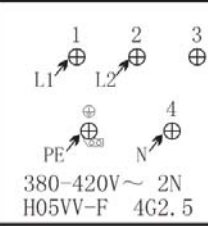wires for each domino hob with touch control models		
Adaptive voltage range and wires		The wiring diagram
220-240 1N~ 50-60Hz	380-420 2N~ 50-60Hz	KADO K 1/5
H05VV-F 3G2.5	H05VV-F 4G2.5	<div><div>CONNECTION DIAGRAM</div><div></div><div></div></div>


- The cable connections must be in accordance with the diagram located on the bottom of the hob.
- You should use a good quality screwdriver to carefully, fully tighten ALL of the terminal screws.
- If when the hob is first switched on, only two of the zones work, you should recheck that the terminal screws are all fully tightened. This should be done before contacting the Customer Care Department.
- **IMPORTANT:** The appliance must NOT be connected to the mains supply by means of a 13A plug and socket.
- This appliance must be wired into a 30 A double pole switched fused spur outlet, having 3 mm contact separation and placed in an easily accessible position adjacent to the appliance. It should not be located above the appliance and no more than 1.25m away from it.
- The cable can be looped if necessary, but make sure that is not kinked or trapped when the hob is in position. Care must be taken to avoid the cable being in contact with hot parts of the appliance.

Replacing the mains supply cable

- ✧ If the mains supply cable is damaged, then it must be replaced by an appropriate replacement.
- ✧ The mains supply cable should be replaced in accordance with the following instructions:
 - Switch the appliance off at the control switch.
 - Open the terminal block on the underside of the hob.
 - Unscrew the terminal screws fixing the cable.
 - The “green-yellow” earth wire must be connected to the terminal marked \perp . It must be about 10 mm longer than the live and neutral wires.
 - The “blue” neutral wire must be connected to the terminal marked with letter (N) - the live wire must be connected to the terminal marked with letter (L).

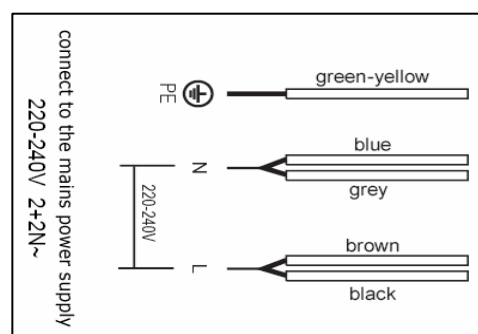


Electrical principle diagram

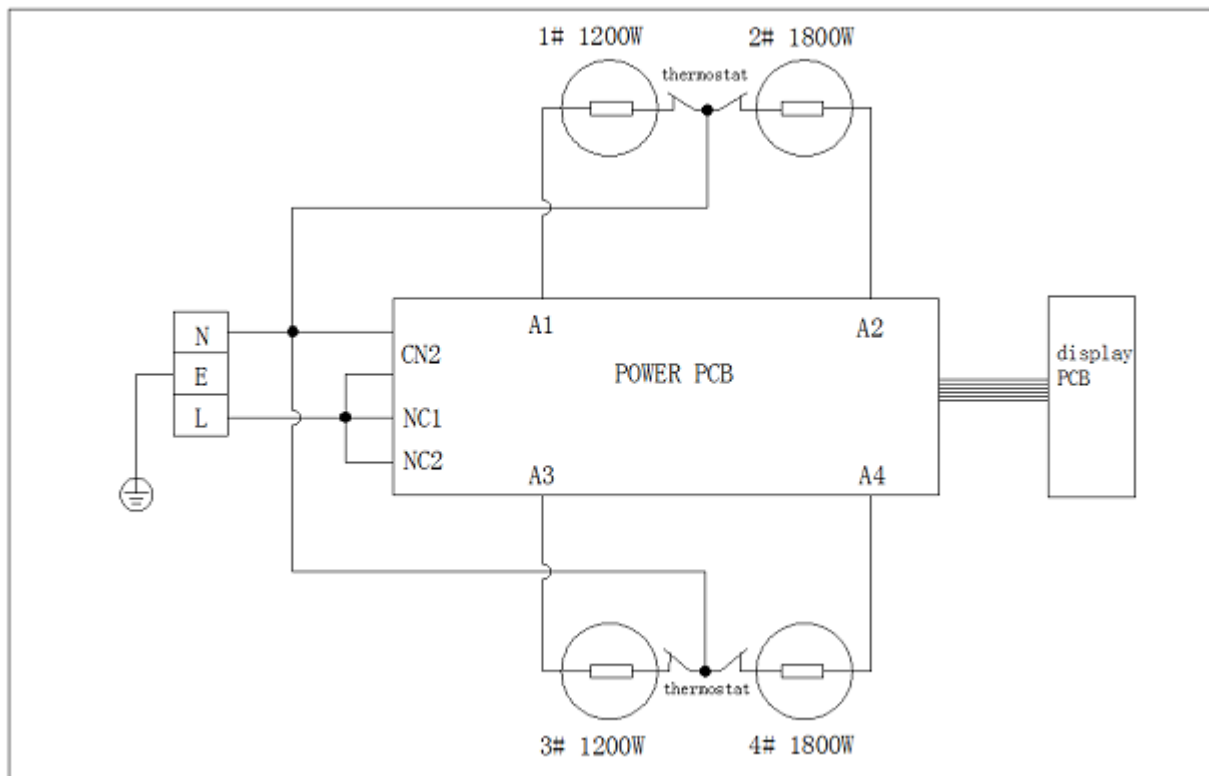

Description of the Ceramic hob surface layout


4 zone ceramic hob schematic diagram

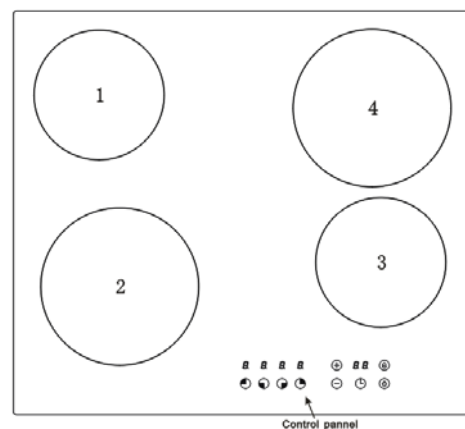

Surface layout table

Furnace plate 1 power (kW)	Furnace plate 2 power (kW)	Furnace plate 3 power (kW)	Furnace plate 4 power (kW)	Total power (kW)
1.2	1.8	1.2	1.8	6.0
Note: 1.2 kW hyperspeed zones (diameter 165 mm); 1.8 kW hyperspeed zones (diameter 200 mm).				

Control panel layout

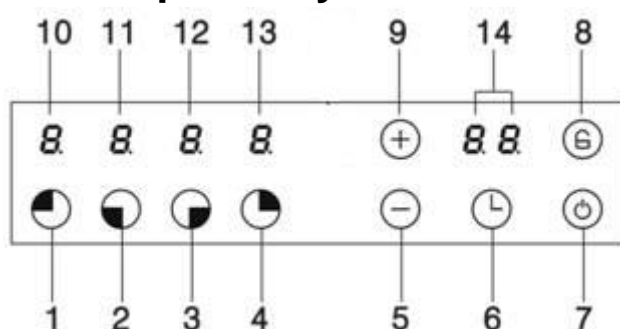

1. Cooking zone rear left select button
2. Cooking zone front left select button
3. Cooking zone front right select button
4. Cooking zone rear right select button
5. minus button
6. Timer indicator
7. ON/OFF button
8. Safety lock button
9. Plus button
10. Cooking zone indicator of rear left
11. Cooking zone indicator of front left
12. Cooking zone indicator of front right
13. Cooking zone indicator of rear right
14. Timer display

Using the ceramic hob

Before first use




IMPORTANT: You should clean the ceramic hob surface (see “Maintenance and cleaning” section).

- ✓ You should switch on one cooking zone at a time, for 5 minutes at the maximum setting. This will help to eliminate any new smell that exists and evaporate any humidity that has formed on the heating elements during transit.
- ✓ Do not burn off more than one zone at once.
- ✓ You must place a saucepan filled half full with cold water on each zone as you burn it off.

Touch controls :

- ✓ All operations are performed by means of the touch controls that can be found on the control panel.
- ✓ Each touch control has a visual display that corresponds to it.

Switching the hob top on

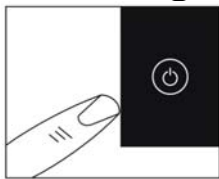


- ✓ Press the ON/OFF button(7) to switch on the appliance.
- ✓ The hob will beep once and all of the cooking zone indicators will light briefly, then go out.
- ✓ This means that the hob has entered stand-by mode.

Switching on a zone and setting a power level

IMPORTANT: A zone must be selected within 1 minute of switching the hob on.




- ✓ Press the cooking zone plus button (1) - (4) of the zone that you want to use.

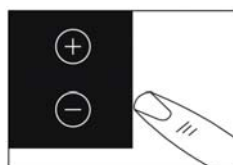


- ✓ Adjust the zone between power levels 1 and 9, using the plus (9) and minus (5) buttons. By holding down either of these buttons, the value on the zone indicator (10) or (11), (12), (13) will adjust up or down.

Switching off a zone

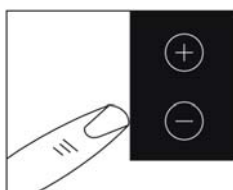


- ✓ Press the cooking zone, then press the minus button (5) of the zone that you want to switch off.
- ✓ Hold the button down until the number in the cooking zone indicator reaches "0". After a few seconds, the zone will switch off automatically.
- ✓ The letter "H" will show in the cooking zone indicator, (see the section on the "residual heat indicator" below).

Switching off the hob

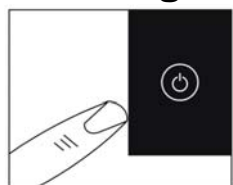

- ✓ Once you have switched off all of the cooking zones, you should turn off the hob.
- ✓ Press the ON/OFF button (7).
- ✓ It is possible to turn the hob off at any time by pressing the ON/OFF button (7).


Residual heat indicator

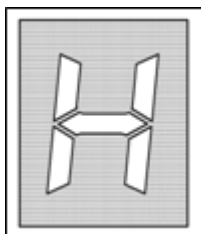

- ✓ After a zone is switched off, the corresponding cooking zone indicator (10) or (11), (12), (13) will show a flashing letter "H". This means that the temperature of the zone is over 60°C and is therefore still high enough to cause injury.
- ✓ When the temperature of the zone falls below 60°C, then the letter "H" will go out.
- ✓ **IMPORTANT:** The residual heat indicator will disappear if the mains supply to the product is cut.


✚ IT IS STILL POSSIBLE TO BURN YOURSELF ON A HOB ZONE, EVEN WHEN THE TEMPERATURE OF IT HAS DROPPED BELOW 60°C.

Locking the hob top

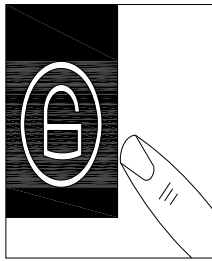


- ✓ The whole hob top can be locked by long pressing the safety lock button (8) for 3S whilst the appliance is under standby status or heating status, and the safety lock icon will display. When the appliance switch off the safety lock icon will extinguish.
 - ✓ When the safety lock has been switched on, it will disable any of the other buttons on the control panel, apart from the ON/OFF button (7).
 - ✓ To disable the safety lock feature, you should long press the safety lock button (8) again. And then can able to adjust the power of any zone on the hob top.
- 🚦 Note: To avoid misoperation, if activate the safety lock by pressing the safety lock button, and the safety lock is not cancelled before the controller is switched off, the safety lock function will continue to be effective when the controller is switched on again. It will disable any of the other buttons except ON/OFF button if not cancelling the safety lock.

The hob timer

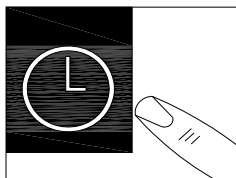

Your hob has a timer which will countdown a period of time between 1 and 99 minutes. At the end of the countdown period an audible signal will sound.

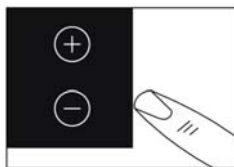

- ✓ Press the timer button (6), use the plus buttons (9) and minus buttons (5) to set the countdown time.
- ✓ The timer display will show the countdown time that is being set.
- ✓ The timer display will increase in 1 minute intervals each time the timer plus button (9) is pressed.
- ✓ The timer display will decrease in 1 minute intervals each time the timer minus button (5) is pressed.
- ✓ When the set time exceeds 99 minutes, it needs to press the minus button (5) and decrease the time back to 0, then can repeat above operation.

Fast-heating function

Your hob can auto-heating following the below steps:

- ✓ Press plus buttons or minus buttons to set the power to level 9, then touch plus buttons to let the burner alternately display “A” and “9”.
- ✓ Press minus buttons to set the final auto-heating level you need.
- ✓ Press “plus button” to achieve 9 speed, and then press one more time to activate fast-heating function. Cooking zone indicator will display “A”. Continue to press “minus button” and choose the cooking speed

The power level and time corresponding tables of Fast-heating are as below:

Power Level	1	2	3	4	5	6	7	8	9
Fast-heating time (minute)	1	3	4.8	6.5	8.5	2.5	3.5	4.5	5

For example, press “plus button” to achieve “A”, and press “minus button” to select speed 4. The cooktop will start cooking at speed 9 for 6.5 mins. After then it returns back to the set speed 4.


Notice:

1. Only if fast-heating at max power within 30s, press minus button can reduce the power, if press minus button after 30s, it will exit the fast-heating mode.
2. If fast-heating at max power after 30s, as long as it is still alternately display “A” and “9”, press plus button the hob will stay at auto-heating mode.
3. When changing power level, the passed time will be automatically calculated into the corresponding heating time of the new power level.
4. Within 30s fast-heating time, if press minus button to any level, the passed time will be calculated to the new set level time, after heating at that remaining time, the hob will return to normal heating mode.

Setting a countdown time

Your hob has a timer which will countdown a period of time between 1 and 99 minutes. If timer display shows 0 for the initial status, press minus button, countdown period will be 30 to 0. At the end of the countdown period an audible signal will sound for 2 minutes, press any key within 2 minutes can close the audible signal.

- ✓ Press the timer button, use the plus button and minus button to set the countdown time, first pressing “+” button, timer will begin from 1.
- ✓ If you want to cancel the timer, you can adjust the countdown time to 0.
- ✓ The timer display will show the countdown time that is being set.
- ✓ The timer display will increase in 1 minute intervals each time the timer plus button is pressed, and a short audible signal will be heard.
- ✓ The timer display will decrease in 1 minute intervals each time the timer minus button is pressed, and a short audible signal will be heard.
- ✓ When the set time exceeds 99 minutes, it needs to press the minus button (5) and decrease the time back to 0, then can repeat above operation.

 Note: 1. For timer adjustment, touch timer button and use plus button or minus button to input new time.

2. After selecting the burner, you can set the timer before setting the power level of the burner, within 10S (decimal point of corresponding digital tube will flash, 1 time/S) no operation after timer adjustment, timer will automatically return to 0 (display show 00), and decimal point will extinguish.

3. After the burner is working, during timer setting and completed, indicator of corresponding burner will flash (1 time/S), and it will keep flashing until end of the timer.



IMPORTANT: The countdown timer controls the entire hob, as well as an individual cooking zone. When this function is used, the hob will switch off entering stand-by mode.


Safety cut-off


- ✓ If one or more of the cooking zones are accidentally left on, a safety cut off will activate after a certain period of time. The length of time depends on the power level that a zone or zones have been set on.

LEVEL	TIME LIMIT (hours)
1-2	6
3-4	5
5	4
6-9	1.5

- ✓ If more than one zone is operating when one of the zones reaches its safety cut-off point, only the zone which has reached its safety cut off point will switch off.

Hob guidelines

- ✧ The first few times the hob top is used, it may give off an acrid, burning smell. This smell will disappear completely with repeated use.
 - ✧ The worktop is fitted with cooking areas of different diameter and power.
 - ✧ The positions where the heat will radiate from are clearly marked on the hob top. The saucepans must be positioned exactly on these zones for efficient heating to occur. Pans should have the same diameter as the cooking zone that they are being used on.
 - ✧ You should not use saucepans with rough bottoms, as this can scratch the ceramic surface.
 - ✧ Before use, make sure that the bottoms of the saucepans are clean and dry.
 - ✧ When cold, the bottom of the pans should be slightly concave, as they expand when hot and lie flat on the surface of the hob. This will allow the heat to transfer more easily.
 - ✧ The best thickness for the bottom of the pans is 2 – 3 mm of enamelled steel and 4 – 6 mm for stainless steel with sandwich type bottoms.
 - ✧ If these rules are not followed, then there will be a great loss of heat and energy. Heat not absorbed by the saucepan, will spread to the hob, frame and surrounding cabinets.
 - ✧ Preferably cover pans with a lid to permit cooking at a lower heat.
 - ✧ Always cook vegetables and potatoes, etc. in as little water to reduce cooking times.
 - ✧ Food or liquid that has high sugar content may damage the hob top if it comes into contact with the ceramic hob surface. Any spillages should be wiped up immediately, however this may not prevent the hob surface from becoming damaged.
-  **IMPORTANT:** The ceramic hob surface is tough; however it is not unbreakable and can be damaged. Especially if pointed or hard objects are allowed to fall on it with some force.

 DO NOT USE THE HOB IF THE SURFACE BECOMES BROKEN OR CRACKED. YOU SHOULD SWITCH OFF THE APPLIANCE TO AVOID THE POSSIBILITY OF ELECTRIC SHOCK AND CONTACT THE CUSTOMER CARE DEPARTMENT IMMEDIATELY.

Maintenance and cleaning



Cleaning operations must only be carried out when the hob is cool.

The appliance should be disconnected from your mains supply before commencing any cleaning process.

Cleaning the ceramic hob top



Any residues that are left on the hob top surface from cleaning agents will damage it. You should remove any residues with warm water mixed with a little washing up liquid.



Abrasive cleaners or sharp objects will damage the hob surface; you should clean it using warm water mixed with a little washing up liquid.



You may find it easier to clean some deposits whilst the hob surface is still warm. However you should take care not to burn yourself if cleaning the hob surface when it is still warm.

After each use

- ◆ Wipe the appliance over with a damp cloth.
- ◆ Dry the appliance by rubbing the surface with a clean cloth.

Cleaning table

Type of deposit	Remove immediately?	Remove when the appliance has cooled down?	What should I use to remove the deposit?
Sugar or food/liquid containing sugar	Yes	No	Ceramic hob scraper
Tin foil or plastic	Yes	No	Ceramic hob scraper
Fat splashes	No	Yes	Ceramic hob cleaner
Metallic discolouration	No	Yes	Ceramic hob cleaner
Water splashes or water rings	No	Yes	Ceramic hob cleaner

Important!

Abrasive cleaners or sharp objects will damage the hob surface; you should clean it using warm water mixed with a little washing up liquid.

Caution!

Ensure the heating plate is clean-a soiled zone does not transfer all of the heat.

Protect the plate against corrosion.

Switch off the hob against corrosion.

Do not leave pans with prepared dishes based on fats and oils unattended on the switched-on plate; hot fat can spontaneously catch fire.



IMPORTANT: If your appliance appears not to be operating correctly, Please contact with dealer.

DO NOT ATTEMPT TO REPAIR THE APPLIANCE YOURSELF.

Please note that if an engineer is asked to attend whilst the product is under guarantee and finds that the problem is not the result of an appliance fault, then you may be liable for the cost of the call out charge.

The appliance must be accessible for the engineer to perform any necessary repair. If your appliance is installed in such a way that an engineer is concerned that damage will be caused to the appliance or your kitchen, then he will not complete a repair.

Troubleshooting

Faults	Causes	Remedies
The appliance do not work,no output displayed.	No power supply input.	1.Check if the power cord connects correctly and power supply normally 2.Change with same type of power supply board.
The appliance display is ok,but cannot operate.	Button breakdown.	Change with same type of switch board.
Heating plate do not work.	Heating plate breakdown.	Change with same type of heating plate.
Screen display E1.	Connection of display board and power supply board breakdown.	Change with same type of switch board.
Screen display E2.	Electric relay breakdown.	Change with same type of power supply board.

Environmental note

Note: Before discarding an old appliance, switch off and disconnect it from the power supply. Cut off and render any plug useless. Cut the cable off directly behind the appliance to prevent misuse. This should be undertaken by a competent person.



This product must not be disposed together with domestic waste. This product has to be disposed at an authorised place for recycling of electrical and electronic appliances. By collecting and recycling waste, you help save natural resources, and make sure the product is disposed in an environmental friendly and healthy way.



WARRANTY

- 1.1 In this warranty:
- 1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;
 - 1.1.2 **Company** means GSM Retail Australia Pty Ltd ABN 53 007 682 475 of 142-144 Fullarton Road, Rose Park SA 5067. Telephone 1300 373 199. Email admin@gsmretailaust.com.au;
 - 1.1.3 **Consumer** means a "consumer" as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Bellini product;
 - 1.1.4 **Consumer Guarantees** means the guarantees under the Australian Consumer Law;
 - 1.1.5 **You** means the Consumer.
- 1.2 Nothing in this warranty affects any person's rights under the Australian Consumer Law. The benefits to any Consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.
- 1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Bellini product will be free of manufacturing defects and will perform to the Company's specifications.
- 1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Bellini product which is installed in a domestic household area.
- *The in Home warranty does not apply to Commercial and or industrial usage. *Please See 1.7.7 for additional information*
- 1.5 This warranty commences on the date of purchase of the Bellini product by the Consumer and continues for the benefit only of the Consumer until the expiry of three (3) year **(Warranty Period)**.
- 1.6 If within the Warranty Period a manufacturing defect is discovered in the Bellini product or it fails to perform to the Company's specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, repair the Bellini product or supply a replacement Bellini product free of charge. A replacement Bellini product may differ from the original product purchased by the Consumer.
- 1.7 This warranty will not apply to any Bellini product:
- 1.7.1 Installed by any person other than a qualified tradesperson; or
 - 1.7.2 Subjected to misuse, neglect, negligence or accidental damage; or
 - 1.7.3 Operated in any way contrary to any operating or maintenance instructions; or
 - 1.7.4 Improperly handled, installed or maintained; or
 - 1.7.5 Altered or modified prior to or after installation; or
 - 1.7.6 Damaged directly or indirectly by power surges, electrical storm damage or connection to incorrect power supply
 - 1.7.7 Industrial and or Commercial usage is inclusive of staff areas in office/ shop environments, hotel/ motel or other similar accommodation or rental type properties including Bed and Breakfast establishments.

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

**IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY THE CONSUMER
MUST CALL 1300 373 199 (AUSTRALIA) OR 0800 764 912
(NEW ZEALAND) TO CONNECT TO THE NEAREST AUTHORISED CENTRE**

- 1.8 You must provide proof of your purchase of the Bellini product and the date of purchase in order to obtain the benefit of this warranty.
- 1.9 If you live outside the service area of the Company or one of its service agents, this warranty does not cover the cost of transport of the Bellini product for service nor the service agent's traveling costs to and from your home.
- 1.10 If you are required to transport the Bellini product to the Company or its service agent, you must ensure it is safely disconnected by a qualified tradesman and securely packed and insured. The Company does not accept any responsibility for loss or damage of the Bellini product prior to it being received by the Company or its service agent.
- 1.11 You will be responsible for all costs of returning a Bellini product to the Company and for redelivery of the Bellini product by the Company (whether it is the original or a repaired and/or a replacement Bellini product) and for any other expenses you incur in claiming under this warranty.
- 1.12 The Company or its service agent will examine any Bellini product and if the Company determines that it is defective through no fault of the Owner and is otherwise undamaged, the Company will repair or replace the Bellini product in accordance with this warranty.

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT

Your Purchase Receipt/Invoice is proof of date of purchase. If you are unable to establish the date of purchase, or if the fault is not covered by this warranty, or if the product is found to be in working order, you will be required to bear all service call charges.

GSM Retail Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from:

Co. Name:

Address:

Date of Purchase:

Serial number:

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown.

**FOR WARRANTY SERVICE CALL 1300 373 199 (AUSTRALIA)
OR 0800 764 912 (NEW ZEALAND) TO CONNECT YOU TO THE NEAREST
AUTHORISED SERVICE CENTRE**

