

Gravy Warmer

stylish ceramic housing



B
E
L
L
I
N
I

BTGWM025

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- To protect against the risk of electric shock DO NOT IMMERSE the base of this appliance, plug or cord into water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Never leave an appliance unattended when in use.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the cord and never carry the appliance by the cord.
- Do not operate any appliance with a damaged cord or plug after the appliance malfunctions, or is dropped or damaged in any manner.
- Do not use outdoors.
- Store unit indoors in a dry location.
- Do not let the cord hang over the edge of table or counter, or touch hot surfaces. Do not operate or place any part of this appliance on or near a hot gas or electric burner or in a heated oven.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Operate on a level surface. Operating on sinks, drainboards or uneven surfaces must be avoided.

- Do not use any appliance for anything other than its intended use.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- Never use harsh, abrasive, caustic or oven cleaners to clean this appliance. Allow to cool before cleaning.
- Do not touch hot surfaces.
- Do not use this appliance with an extension lead.
- Do not operate underneath or near flammable materials, such as curtains or drapes or any other combustible material.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Extreme caution must be taken when moving an appliance containing hot liquid.
- **CAUTION:** The warming surface will remain hot after the unit is turned off.
- This appliance is intended to be used in household and similar applications.
- **WARNING:** Do not use the appliance if the surface is cracked.

Compulsory Warning

If the supply cord is damaged, the cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of Your Gravy Warmer



Getting to Know Your Gravy Warmer

Congratulations on the purchase of your new Bellini Gravy Warmer.

Before first using your new Gravy Warmer, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Before First Use

Remove and safely discard any packaging material and promotional labels.

Wash the gravy boat with warm soapy water using a sponge or soft cloth. Rinse and dry thoroughly.

Wipe the warming base with a clean damp cloth. Do not use abrasive cleaners or scouring pads. Do not immerse the base in water.

Using the Gravy Warmer

1. Plug the Gravy Warmer into a standard domestic power outlet and switch on.
2. Press the switch to "on" position, the indicator light will illuminate to indicate the appliance is in operation.
3. Pour the hot or warm gravy/sauce in the gravy boat, then place the boat onto the Warming base. The gravy or sauce will maintain a warm serving temperature.

Care and Cleaning

1. Switch off and unplug the Gravy Warmer from the power outlet.
2. Allow the appliance to cool completely.
3. Wash the gravy boat with warm soapy water using a sponge or soft cloth.
4. Rinse and dry thoroughly.
5. Wipe the warming base with a clean damp cloth.

Warning: Do not use abrasive cleaners or scouring pads. Do not immerse the base in water.

Hints and Tips

- Gravy or sauce should be hot/warm when put in the gravy boat.
- The Gravy Warmer is designed to keep the gravy or sauce at a desired temperature. It is not intended to heat cold gravy or sauce.
- The warming base has a switch to turn the unit on or off. It does not operate when the switch is in the off position.
- Use the warming base with the ceramic gravy boat only.

Notes

Notes

Warranty

The benefits conferred by this warranty are in addition to the consumers guarantees and other rights and remedies in respect of the product which the consumer has under the Australian Consumer law.

The original purchaser of this Bellini product is provided with the following warranty, subject to the following conditions.

This product is warranted for a period of 1 year from the date of purchase for all parts defective in workmanship or materials. Should an instance occur where the product is deemed faulty, the product will need to be returned to the retailer where it was purchased to be replaced with the same product or a refund issued. In order to obtain an exchange or a refund, proof of purchase must be presented to the retailer.

This warranty is in addition to all other rights and remedies available under the Australia Consumer Law and other laws and shall not be taken as applying to exclude, restrict or modify such rights or remedies in any other matter whatsoever.

WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.

5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT

Your Purchase Receipt/Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or a refund.

GSM International Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from: _____

Co. Name: _____

Address: _____

Date of Purchase: _____

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.

Cat. No. BTGWM025
September 2011

G | S | M
Gerard Sourcing & Manufacturing

GSM International Ltd.

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028