

Pizza Maker



BTPZO945B

Belini®

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- To protect against the risk of electric shock DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Young children should be supervised to ensure that they do not play with the appliance.
- NEVER INSERT A KNIFE OR ANY OTHER UTENSIL INTO THE PIZZA MAKER. This may damage the mechanism and cause a safety hazard.
- Do not touch hot surfaces.
- Be careful the hot steam release from heating pot.

CAUTION: The temperature of the outer surface may be high when the appliance is in operation. It may have steam release from cooking pot when the appliance is in operation or opening the lid.

- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp plug and pull from the power outlet. Never pull cord. Never carry the appliance by the cord.
- Do not operate any appliance with a damaged cord or plug; after the appliance malfunctions, or is dropped or damaged in any manner.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces. Do not place any part of this appliance on or near a hot gas or electric burner or in a heated oven.
- Allow the appliance to cool before cleaning.

- Operate on a level surface. Operating on sinks, drain boards or uneven surfaces should be avoided.
- Do not use the appliance for anything other than its intended use. This product is intended for household use only.
- DO NOT MOVE appliance when switched on. Ensure the power cord does not touch the oven housing when in use.
- Dispose of packaging properly keeping plastic bags away from babies and young children.
- Do not use outdoors or for commercial purposes.
- Use only on heat resistant surfaces.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.
- The appliance should not be covered or operated near or underneath flammable material such as curtains or drapes or other combustible materials when in operation.
- Never leave the appliance unattended when in use.
- Do not operate in the presence of flammable or explosive materials.
- Do not use an extension cord with this appliance.
- Store the appliance indoors in a dry location.
- Do not reach for an appliance that has fallen in water. Switch off at the power outlet and unplug immediately.
- The appliance is only to be operated in the closed operation.
- Household use only.
- The appliance is not intended to be operated by means of external timer or separate remote-control system.
- Read this user manual carefully before use and save it for future reference

Warning

If the supply power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of Your Pizza Maker



Getting to Know Your Pizza Maker

Congratulations on the purchase of your new Pizza Maker.

Before first using your new appliance, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

Before Using For The First Time

1. Carefully unpack the Pizza Maker and remove all packaging and materials.
2. Before using your Pizza Maker for the first time, wipe the cooking plates with a damp cloth to remove all dust, and then dry. Wipe outer surfaces with a slightly damp, soft cloth or sponge.

CAUTION: Take care to prevent water from running into the appliance. NEVER IMMERSE PIZZA MAKER BODY IN WATER OR ANY OTHER LIQUIDS!

3. Set the appliance on a dry, clean and flat surface. Keep the Pizza Maker closed until use.

CAUTION: It maybe have steam release from cooking pot when the appliance is in operation or opening the lid.

How to Use Your Pizza Maker

1. Use the lid handle to lift the top lid to the open position.
2. Before baking the first pizza of the day, pour a teaspoon of vegetable oil to both the top and bottom plates. Spread with an absorbent kitchen towel and wipe off any excess oil.
3. Plug the Pizza Maker into a standard domestic power outlet to preheat. The power indicator light will illuminate. Close the lid.

NOTE: When your Pizza Maker is heated for the first time, it may emit slight smoke or odor. This is normal and should disappear after 1 or 2 uses. This does not affect the safety of the appliance. However, as it may affect the flavor of the first pizza prepared in the Pizza Maker, it is recommended that these be discarded.

4. While preheating, prepare the pizza.
5. After approximately 2 to 3 minutes, the Ready indicator light will turn on, indicating the unit is preheated and is ready for use.
6. Recipes may vary in cooking time and brownness; fresh pizza will brown quicker than frozen pizza. Note the perfect bake times for each pizza recipe for future use.
7. When the Pizza Maker is preheated, following the recipe. Place the pizza directly onto the cooking plate.
8. Use the handle to lower the top lid.
9. Close the Pizza Maker and allow to cook for approximately 25 minutes or until cheese is melted and crust is golden.

NOTE: Check for doneness by inserting a dry toothpick into the center of the pizza. If it comes out dry, the pizza is ready.

10. If necessary, continue cooking by broiling for 1 or 2 minutes, or until cheese bubbles.
11. The READY light will cycle on and off as the unit maintains baking temperatures.
12. Wearing oven mitts, wipe the outside with a clean paper towel or cleaning cloth if necessary.
13. At the end of the cook time, use the handle to lift the top lid.
14. Wearing oven mitts, remove the pizza from the cooking plate using a non-metallic utensil.

NOTE: If additional pizza is to be baked, keep the Pizza Maker closed to retain heat. Always wait until the Ready indicator light turns on before baking more pizza.

NOTE: Pizza made later may bake faster because extra heat has been retained. It may be necessary to adjust to a shorter cooking time to accommodate.

15. When baking is complete, unplug the power cord from electric outlet. Lift the top lid to expose the cooking plate and allow unit to cool.
16. Remove baked pizza; Cut into slices and serve immediately.
17. Do not clean until unit has been fully cooled.

Care & Cleaning

CAUTION: Unplug from electrical outlet and allow to cool thoroughly before cleaning.

1. The Pizza Maker does not disassemble for cleaning.
2. Never immerse appliance in water or other liquids. Never place the Pizza Maker in dishwasher.
3. Brush cooking plates with a clean, soft pastry brush or cloth. To condition plates, lightly coat the cooking surfaces with solid vegetable shortening or vegetable oil. Carefully follow suggested cleaning procedures below. After a time, if pizza show signs of sticking, recondition as needed.
4. To protect the premium quality non-stick surfaces, use only plastic, nylon or wooden utensils.
5. To remove any pizza batter baked onto the cooking plates, pour a small amount of cooking oil onto the hardened batter. Allow to set for 5 minutes, then wipe softened batter off with a paper towel or soft cloth. Remove stubborn stains with a plastic mesh puff or pad. A clean round kitchen brush or a toothbrush works well to remove baked-on batter from the molds. For best results, use only products with directions stating they are safe for cleaning non-stick cooking surfaces. Do not use steel wool or coarse scouring pads.
6. The exterior finish should be cleaned with a non-abrasive cleaner and a soft, damp cloth. Dry thoroughly.

Storing Instructions

- 1. Make sure unit is unplugged and fully cooled.
- 2. Close the lid.

WARNING: Never store Pizza Maker while it is hot or still plugged in.

- 3. Use the cord wrap on the bottom of the Pizza Maker to store the cord.
- 4. Do not put any stress on the cord where it enters unit, as this could cause cord to fray and break.
- 5. Store Pizza Maker in its box or stand unit on its end for easy and compact storage.

Specifications

Power Supply.....	220-240V~ 50Hz
Power Consumption.....	1330-1580W

NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated on the packaging.

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.

Cat. No. BTPZO945B
May 2015