

# Stick Mixer Set

brushed stainless steel housing



©  
i  
i  
i  
i  
e  
B

**BTSMS10**

# *Important Safeguards*

**When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury to persons, basic safety precautions should always be followed:**

## *For Your Safety*

**Read all instructions carefully, even if you are quite familiar with the appliance.**

- To protect against the risk of electric shock, DO NOT IMMERSE the motor end of the Blender, cord or plug in water or any other liquid.
- Do not operate in the presence of explosive and/or flammable liquids or fumes.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Switch off the power outlet and remove the plug before cleaning or when the appliance is not in use.
- Do not operate any appliance with a damaged cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the cord to hang over edge of a table or counter, or touch hot surfaces. Do not operate or place any part of this appliance on or near a hot gas or electric burner, or in a heated oven.
- The use of attachments or accessories not recommended or sold by the manufacturer can cause fire, electric shock or injury.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided.

- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- This appliance is only intended to be plugged into a standard domestic power outlet.
- Do not use outdoors.
- Do not misuse the cord. Never carry the appliance by the cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Never use this appliance with an extension cord.
- Do not attempt to repair, disassemble or modify the appliance. There are no user-serviceable parts.
- When mixing hot liquids, use a tall container or mix in small batches to reduce the chance of spillage.
- Blades are sharp: handle carefully. Keep hands away from the blade area.
- Keep hands and utensils out of the jar while operating the appliance. A rubber scraper can be used when the Blender is turned off.

## *Compulsory Warning*

If the supply cord is damaged, the cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

## *Save These Instructions*

# Features of Your Stick Mixer Set



## *Your Stick Mixer Set*

Congratulations on the purchase of your new Stick Mixer Set.

Before first using your new Stick Mixer Set, it is most important that you read and follow the instructions in this use and care booklet, even if you feel you are familiar with this type of appliance.

Your attention is drawn particularly to the section dealing with IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet handy for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

## *How to Use Your Stick Mixer Set*

Before first use, carefully unpack the unit and remove all packaging material. Wipe the handle with a warm damp cloth. Wash the shaft and mixing blade in warm soapy water.

- Be careful not to submerge the body above the shaft. Dry thoroughly.
- Pay careful attention to the sharp blades.

Your new Stick Mixer Set is great for preparing a variety of foods and drinks including the following:

- A variety of mixed drinks.
- Chopping fruits and vegetables.
- Producing emulsions, eg. mayonnaises, sauces, baby foods, creams, etc.
- Making pureed vegetables for soups, baby foods, etc.
- Preparing cocktails, shakes and smoothies.

**Note: Always use a high-sided mixing container to avoid spillage while blending.**

### **IMPORTANT**

- The appliance is designed for short periods of use: do not operate for longer than 60 seconds at a time and rest 5 minutes before next use.
- The Stick Mixer Set performs tasks in seconds – not minutes. Stop Blender to check consistency during operation; restart only if necessary.
- Any time you feel the unit becoming too hot, turn it off until cool.

### **Tips and Techniques**

- Move the Blender up and down in the mixture in a circular motion unless a recipe calls for a specific mixing procedure. A strong suction can occur if the Blender is allowed to rest on the bottom of the container while in operation.
- When mixing powdery dry ingredients with liquid, turn off the Blender about halfway through the mixing time. Scrape down sides of the container and the blending shaft before mixing again.

- Watch the consistency of foods while using the Stick Mixer Set and check the blade and blade housing for clogged food. Turn the power off and use a rubber scraper to carefully remove any obstruction.
- DO NOT use the Stick Mixer Set in a container that is still over heat on the stove.
- Wash, trim and peel (if desired) fresh foods before blending or mixing.
- Cut firm or fibrous foods into 1cm to 1.5cm pieces and softer foods into 1.5cm to 2.5cm pieces.
- Most foods require some liquid for effective circulation through the blades. Soft, juicy foods will need little liquid; dry foods require more. Add liquid in small amounts until desired consistency is obtained.
- This product is not intended for continued use over 60 seconds at a time.

### **Using the Chopper Attachment**

1. Place ingredients such as dried fruits, nuts or vegetables into the chopper bowl. Replace lid and twist into position.
2. Place the chopper bowl on a level surface.
3. Remove the shaft from the Stick Mixer Set then position the Stick Mixer Set above the collar of the chopper attachment.
4. Press down firmly and turn clockwise until the two pieces lock tightly.
5. Plug the cord into a power outlet, switch on outlet and commence operation.

## *Care and Cleaning*

- Be sure that the unit is turned off and unplugged before cleaning.
- It is recommended that you wash the Stick Mixer Set immediately after using it.
- DO NOT PLACE THE UNIT IN THE DISHWASHER.
- Clean the surface with a warm damp cloth.
- DO NOT IMMERSE the motor end of the Blender, the cord or plug in water or any other liquid.
- It may be necessary to wash the blades in warm soapy water to thoroughly remove any food residue. A soft nylon brush may be helpful. DO NOT use any abrasive cleaners.

**Note: If the cord supplied with the appliance becomes damaged, discontinue use. Repair should be undertaken only by a qualified electrician.**

# *Notes*

# *Notes*

# Warranty

The benefits conferred by this warranty are in addition to the consumers guarantees and other rights and remedies in respect of the product which the consumer has under the Australian Consumer law.

The original purchaser of this Bellini product is provided with the following warranty, subject to the following conditions.

This product is warranted for a period of 1 year from the date of purchase for all parts defective in workmanship or materials. Should an instance occur where the product is deemed faulty, the product will need to be returned to the retailer where it was purchased to be replaced with the same product or product of equivalent value and type free of charge, or a refund issued. In order to obtain an exchange or a refund, proof of purchase must be presented to the retailer.

This warranty is in addition to all other rights and remedies available under the Australia Consumer Law and other laws and shall not be taken as applying to exclude, restrict or modify such rights or remedies in any other matter whatsoever.

## WARRANTY CONDITIONS

1. This warranty is only valid for appliances used according to the manufacturer's instructions.
2. This appliance must not be modified or changed in any way.
3. Connection must be to the voltage requirements as specified in the ratings label located on the product.
4. The manufacturer does not accept liability for any direct or consequential damage, loss or other expense arising from misuse or incorrect installation and operation of the appliance.

5. Warranty will only be given where proof of purchase is provided, e.g. original invoice.
6. Not designed or warranted for industrial or commercial use.

## DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

## RETAIN & FILE WITH YOUR RECEIPT

Your Purchase Receipt/Invoice is proof of date of purchase. You must be able to present it at the place of purchase to obtain a replacement or a refund.

GSM International Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation. Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from: \_\_\_\_\_

Co. Name: \_\_\_\_\_

Address: \_\_\_\_\_

Date of Purchase: \_\_\_\_\_

**NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this package slightly different to that shown.**

Cat. No. BTSMS10  
February 2011

# G | S | M

Gerard Sourcing & Manufacturing

## GSM International Ltd.

GSM International Ltd has a policy of continual improvement throughout the product range. As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028