

# 4 Slice Countdown Toaster



Bellini®

**BTT780**

# Important Safeguards

**When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury, these basic safety precautions should always be followed:**

## For Your Safety

***Read all instructions carefully, even if you are familiar with the appliance.***

- NEVER INSERT A KNIFE OR ANY OTHER UTENSIL INTO THE TOASTER. Doing so could cause damage to the Toaster and is a serious safety hazard.
- Contact with the elements inside the Toaster could result in electric shock. To free broken or burnt toast, unplug the Toaster from the power outlet and turn it upside-down.
- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the power cord. Never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug; if the appliance malfunctions; or if it is dropped or damaged in any manner.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Carefully unpack the Toaster and remove all packaging material, ensuring that NO combustible material (Plastic or Cardboard) is present in the toasting chamber prior to use that has the potential to ignite.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided.
- Do not touch the hot surfaces of this appliance. Do not touch the metal body of the Toaster during or immediately after operation, as it will be hot. Severe burns may result from misuse.
- Do not use this appliance for anything other than its intended use. This product is intended for household use only. And not for commercial, industrial or outdoor use. Do not use this appliance in any manner or with any other accessories that are not recommended within this instruction manual. Doing so may cause fire, electric shock or injury.
- A short power-supply cord is provided to reduce the risk of tripping or entanglement. Do not use with an extension power cord.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated oven).
- Allow to cool before cleaning or storing.
- Do not use outdoors.
- Store the unit indoors in a dry location.
- Do not attempt to repair, disassemble or modify the appliance. There are no user serviceable parts.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material (such as curtains) and it must be supervised at all times when in use
- Do not cover bread slots while the Toaster is in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Do not operate the Toaster without bread.
- Do not operate under or near flammable materials, Such as curtains, Drapes and any other combustible materials.
- Do not attempt to heat metal or foil packages in the Toaster.

- Do not allow breadcrumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard.
- Do not leave the appliance unattended when it is in use, Always unplug it from the mains socket when it is not in use and before cleaning. Keep this until out of the reach of the children.
- The apparatus shall not be exposed to dripping or splashing and objects filled with liquids, such as vases, shall be placed on the product to prevent fire or shock hazard. Do not expose this appliance to rain or moisture.
- Do not use the toaster without the removable sliding crumb tray in place, The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Do not attempt to dismantle or repair this unit yourself. Repairs should only be performed by qualified personnel in order to avoid a hazard.
- This appliance must be earthed. Only connect it to suitable earthed AC 240V 50Hz mains socket.
- This appliance is intended to be used in household and similar application such as :
  - Staff kitchen areas in shop, offices and other working environments;
  - farmhouses;
  - By clients in hotel, motels and other residential type environments.
  - Bed and breakfast type environments.
- The enclosure of toaster, including the immediate surroundings of the bread slots, may become very hot during toasting. Do not attempt to touch these areas during, or within 10 minutes after the toasting process. This could result in physical injury. When in doubt, disconnect the appliance from the mains outlet and allow it to cool for at least 10 minutes.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.

## Warning

If the power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

## Save These Instructions

### Getting to Know Your Bellini 4 Slice Countdown Toaster

Congratulations on the purchase of your new Bellini 4 Slice Countdown Toaster.


Carefully unpack the Toaster and remove all packaging material, ensuring that NO combustible material (Plastic or Cardboard) is present in the toasting chamber prior to use that has the potential to ignite.

Before using your new 4 Slice Countdown Toaster for the first time, it is extremely important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are familiar with this type of appliance.

In particular, please pay close attention to the section entitled IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.

# Features of Your Bellini 4 Slice Toaster

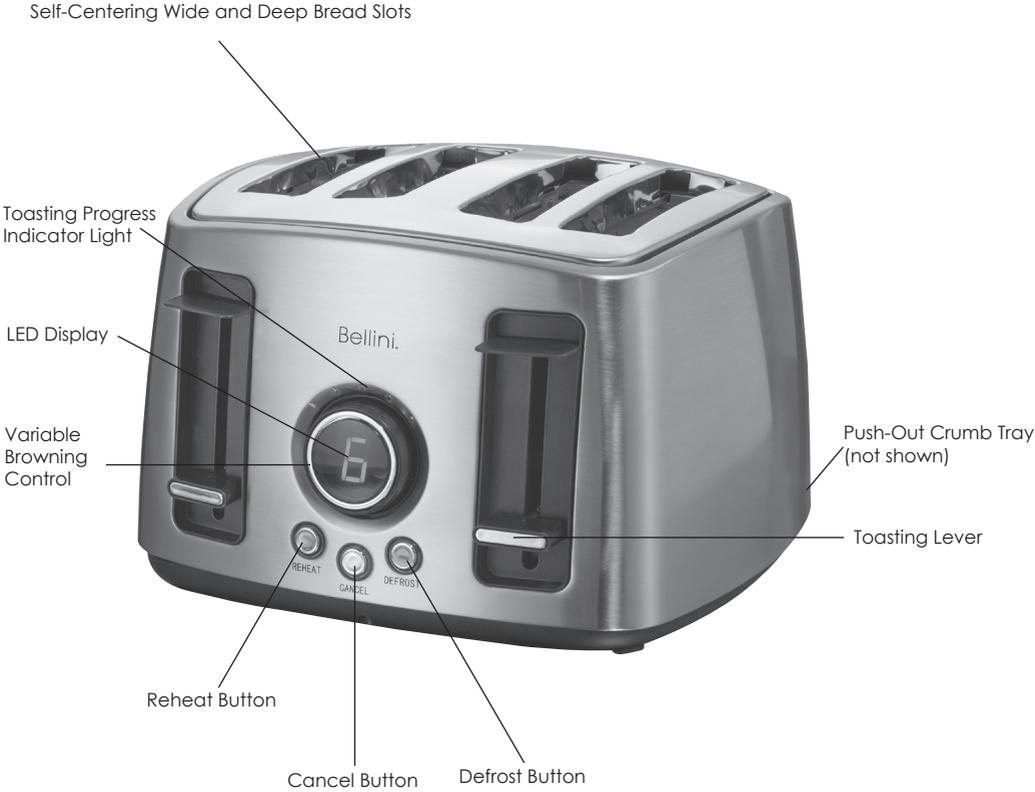

# How to Use Your Bellini 4 Slice Countdown Toaster

Before using the appliance for the first time, carefully unpack and remove all packaging material.

**Attention:** You may experience odors when the appliance is operated on for the first time. To avoid any discomfort, place the Toaster in a well-ventilated area for 10 minutes when switched on and operated for the first time.

Plug the Toaster into a standard domestic power outlet and switch the power outlet on.

Place bread into the bread slots and press the toasting lever down until it locks into position. The toaster commences operation, 5 blue LED lights count down gradually to indicate the toasting progress.

Place only 1 slice of bread into each toasting slots. Ensure the bread slices are not too large or thick to fit in the slots. If you only toast one or two slices of bread, push down the toasting lever of the side of the appliance where you have placed the bread. If you toast three or four slices of bread, push down both toasting levers.

**Note: The lever will not lock into position if the Toaster is not plugged into a power outlet or if the power outlet is not switched on.**

Adjust the variable browning control to the desired toast colour setting. Choose a setting based on the type of bread you are toasting and your personal preference. Start on a low/medium setting (3 - 5) and adjust the variable browning control to a lighter setting (1- 2) or darker setting (6-9).

**Note: The condition of the bread will determine how quickly it toasts. Dry or stale bread toasts faster than fresh bread.**

When toasting is completed, the toast will pop up and the Toaster will switch off automatically. Toasting may be interrupted during the cycle by pushing the Cancel button. Toasting will stop and the toast will pop-up.

Allow the Toaster 15 to 20 seconds to cool before beginning the next toasting cycle. This permits the electronically controlled thermostat

to reset for the next toasting cycle.

**Note: Do not touch the Toaster walls when the Toaster is in use.**

**WARNING: Do not leave toaster unattended when it is in use as toast may jam or wedge in the bread carriage.**

**CAUTION: Do not use a knife or another sharp metal tool to remove bread from the toaster and do not touch the metal internal parts of the toaster.**

## Reheat Button

Toast can be reheated by placing cold toast in the bread slots, lowering the lever and pressing the reheat button. The reheat light will come on and the toast will be reheated over a short, fixed period of time.

**Note: When using the reheat function, keep a close eye on the bread to ensure it doesn't burn.**

## Cancel Function

The toasting cycle can be stopped at any stage by pressing the Cancel button. The toast will pop up and the Toaster will switch off automatically.

## Defrost Function

The defrost function is useful for thawing and toasting frozen bread all in one operation. Adjust the variable browning control to the desired toast colour setting. Start on a low/medium setting (3 - 5) and adjust the variable browning control to a lighter setting (1-2) or darker setting (6-9) depending on your personal preference.

Place frozen bread or crumpets into the bread slots.

Press the lever down to the locked position and press the defrost button. The defrost light will illuminate.

When thawing and toasting is complete, the toast will automatically pop-up and the Toaster will switch off automatically.

# Care and Cleaning

Switch off the power outlet and unplug the Toaster; ensuring you let the Toaster cool before cleaning.

Wipe over the exterior of the Toaster and power cord with a soft damp sponge or cloth.

Do not use abrasives or strong household cleaners, as they will damage the brushed chrome finish.

The crumb trays will need to be cleaned occasionally. Push the crumb tray inward, it will pop out for easy removal of breadcrumbs. After cleaning, push it back to lock into position.



**Note: Do not try to clean the inside of the Toaster using a cleaning brush or tool or to wash with water or detergent as this may damage the toasting elements. If required turn the Toaster upside down over a sink and shake it firmly to dislodge any bread or food matter which may be stuck. Water and liquids must never enter the toaster.**

# Specifications

Power Supply.....220-240V~ 50Hz

Power Consumption.....1600W

Note: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.

# Notes

**G | S | M**

Gerard Sourcing & Manufacturing

**GSM International Ltd.**

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.  
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



Cat. No. BTT780  
January 2015