

# 2 Slice Toaster



Bellini®

**BTT815**

# Important Safeguards

## **To prevent electrical shock, personal injury or property damage, read and follow all instructions and warnings.**

- Please read these instructions before operating and retain these for future reference.
- Dangerous high voltages are present inside this enclosure. To avoid electric shock, DO NOT open the cabinet. Refer servicing to qualified personnel only.
- The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the product. To prevent fire or shock hazard, DO NOT expose this appliance to rain or moisture.
- No naked flames sources, such as candles, should be placed on the product.
- To protect against fire, electrical shock and injury to persons, do not immerse the unit, plug or cord in water or spray it with other liquids.
- This appliance is intended for household use only and not for commercial, industrial or outdoor use. Do not use this appliance in any manner or with any other accessories that are not recommended within this instruction manual. Doing so may cause fire, electric shock or injury.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance. Children should be closely supervised when using this appliance.
- Do not leave the appliance unattended when it is in use. Always unplug it from the mains socket when it is not in use and before cleaning. Keep this unit out of the reach of the children.
- Always use the appliance on a dry and non-slippery level surface, away from any contact with water.

- Do not let the cord hang over the edge of a table or counter, or allow it to touch hot surfaces. Allow unit to cool before wrapping cord around base for storage.
- Do not use the toaster without the removable sliding crumb tray in place. The crumb tray should be cleaned regularly. Do not allow crumbs to build up in the tray.
- Do not place this appliance on, or near a hot gas or electric burner, or where it could come into contact with a heated oven, or microwave oven.
- Do not operate the appliance if there is a malfunction or if it is damaged in any manner.
- In the interest of safety, regular periodic close checks should be carried out on the supply cord to ensure no damage is evident. Do not attempt to dismantle or repair this unit yourself. Repairs should only be performed by qualified personnel in order to avoid a hazard.
- If the supply cord is damaged, it must be replaced by the manufacturer or similarly qualified person in order to avoid a hazard.
- The bread may burn, therefore do not use the toaster near or below combustible material, such as curtains.

## Safety Instructions

- This appliance must be earthed. Only connect it to a suitable earthed AC 240V~50Hz mains socket.
- This appliance is not intended to be operated by means of an external timer or separate remote-control system. This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices and other working environments;
  - Farmhouses;
  - By clients in hotels, motels and other residential type environments;
  - Bed and breakfast type environments.

- The enclosure of the toaster, including the immediate surroundings of the bread slots, may become very hot during toasting. Do not attempt to touch these areas during, or within 10 minutes after the toasting process. This could result in physical injury. When in doubt, disconnect the appliance from the mains outlet and allow it to cool for at least 10 minutes.
- A short power-supply cord is provided to reduce the risk of tripping or entanglement.
- Do not cover this appliance while in use.

## Warning

- Never attempt to extract jammed toast, muffins, bagels or any other item with a knife or any other object, as contact with live elements may cause electrocution. Allow the appliance to first cool down, then unplug and carefully remove the bread.
- Caution - bread may burn. When using this appliance, allow adequate air space above and on all sides for air circulation. Do not allow this appliance to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. CAUTION is required on surfaces where heat may cause a problem. An insulated heat pad is recommended.
- Do not immerse it in water or other liquid or use it near washbasins or sinks. Do not use it if hands are wet.

# Features of the Toaster



## Before Using For The First Time

Ensure the above safety precautions are understood.

- Carefully unpack the appliance and remove all the packaging materials attached to your toaster especially the paper card.
- Read the manual and carefully follow the instructions.
- Always use the appliance with a power outlet of the same voltage (A.C. only) as marked on the bottom of unit.
- Check that the removable crumb tray is correctly locked underneath the toaster.
- Unwind the supply cord completely. Connect to the mains wall outlet.

## First Time Use

- Before using for the first time, set the Browning Controller to "2" position without inserting any bread.
- Turn on the toaster. Using it for the first time without bread will remove any unpleasant odours from the new appliance.

## Setting The Browning Control

- Rotate the Electronic Browning controller to the appropriate setting depending on the type and thickness of the bread: 1-2 slightly toasted, 3-5 well toasted, 6-7 very toasted.
- After trying out the toaster a few times, you will quickly get to know the right setting for each type of bread.
- When the toaster is hot, the bread toasts more quickly and may need adjusting to a lower setting.
- Bread must be of similar size, type and thickness, otherwise they will be toasted unevenly. Oversized food, metal foil packages and utensils must not be inserted in the toaster as they may cause fire or electric shock.

## Inserting The Slices Of Bread

Put one to 2 slices of bread in the toasting slots. Make sure the slices do not overlap each other. The High lift / bread release lever must be in the up position. Tip: For the best toasting results, always put the slices in the centre of the slots.

## Toasting Bread

- Check that the main voltage corresponds to the voltage indicated on the bottom of appliance.
- Insert the plug into a suitable mains outlet and turn the power on.
- Place only 1 slice of bread into each of the toasting slots. Ensure the bread slices are not too large or thick to fit in the slots.
- Select the desired browning setting using the Browning controller. (No.1-lightest, No.7-darkest). When using the toaster for the first time we suggest you set it to number 3. Various types of bread and personal preference may require a different browning setting.
- Press the High lift / bread release lever down until it clicks into place. Toasting cycle will automatically commence.

- The toaster turns off when the desired toast colour is achieved and automatically raises the toast. The toasting process can be stopped at any time by pressing the Cancel/ Stop button. Unplug the toaster immediately after use.

**Note:**

- **Allow the toaster 15-20 seconds to cool before beginning the next toasting cycle. This permits the electronically controlled thermostat to reset for the next toasting cycle.**
- **The metal grills will automatically adjust to the thickness of the slices.**
- **The High lift / bread release lever can only be locked in the lower position when the appliance is plugged in.**
- **After extended use, crumbs or dust may block the locking system. To correct this, simply press down the High lift / bread release lever several times successively to lock it and please refer to maintenance and cleaning tips.**

**Warning: Do not leave it unattended when it is in use as toast may jam or wedge in the bread carriage.**

**Caution: Do not use a knife or another sharp metal tool to remove bread from the toaster and do not touch the metal internal parts of the toaster.**

## Toasting Frozen Bread

To toast frozen bread which has been removed from a freezer, place one to two slices of frozen bread into the toasting slots, set the desired browning setting, lower the high lift lever until it clicks into place, and then press the Defrost button, the Defrost button lights up.

**Note: Toasting frozen bread takes longer than toasting defrosted bread.**

## Reheating Toasted Bread

This function allows you to reheat toast without additional toasting. To reheat, place the toasted bread back into toasting slots, lower the high lift lever until it clicks into place and then press the Reheat button, the Reheat button lights up.

**Note: When using the reheat function, keep a close eye on the bread to ensure it doesn't burn.**

## Interrupting Toasting Process

- The toaster has a Cancel/Stop function so that you can interrupt the toasting process at any time by pressing the Cancel/Stop button. The bread will automatically pop up. (For example, if you realize that the settings are not properly adjusted or if you think the bread is sufficiently toasted, you can easily cancel the toasting process.)
- If the bread jams in the slots and the elements do not switch off, remove the plug from the wall outlet and wait for the appliance to cool down. Then carefully remove the bread from the toaster slot, taking care not to touch the heating elements. To remove smaller items, lift the High lift lever approximately 10mm above the starting position.

## Stopping The Toasting Process

- Once toasted, the operating control is automatically unlocked, the slices of bread pop up and the toaster stops working.
- To stop the toaster at any time or cancel the other functions, press the Cancel/Stop button and the bread will pop up and the toaster will switch off.

# Maintenance And Cleaning

1. Always turn the power off, remove the plug and allow the toaster to cool before cleaning.
2. To remove any crumbs from the toaster, slide out the crumb tray from the toaster, empty and place it back in the toaster before using it again.
3. Wipe the outside of the toaster with a slightly dampened cloth and polish it with a soft dry cloth.
4. Do not immerse it in water or any liquid when you clean the unit.
5. To clean the interior, turn the toaster upside down (after you have cleaned the crumb tray) over the sink and shake out any pieces of bread that may be stuck between the grills.
6. Care must be taken not to touch any hot surfaces. Do not store or cover the appliance until it has fully cooled down.
7. Do not use harsh abrasives, caustic cleaners or oven cleaners when cleaning this appliance.
8. If you need to remove a piece of bread which is jammed in the slot, unplug the appliance, allow to cool, press down the toaster control level, gently dislodge the blockage with a non-metallic object, and lift the toaster control lever to remove the blockage.
9. The crumb tray should be cleaned regularly. Do not allow breadcrumbs to accumulate in the bottom of the toaster.
10. Never insert any hard object into the bread slot as this could damage the heating elements.
11. To clean the exterior and the cord, wipe it down with a damp cloth. Let it dry before using it again.
12. Do not use scouring powders, abrasive pads, wire or steel wool, oven cleaners or bleach.
13. Never wrap the cord around the outside of the appliance during or after use. Cord storage is located under the appliance.

# Specifications

Power Supply.....AC 220-240V~50Hz

Power Consumption.....1000W

**NOTE: As a result of continual improvements, the design and specifications of the product within may differ slightly to the unit illustrated from the packaging.**

**G | S | M**

Gerard Sourcing & Manufacturing

**GSM International Ltd.**

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.  
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028

Cat. No. BTT815  
December 2013