

Premium Wine Cellar

28 bottle storage



©
- i -
i
- i -
i
- i -
e
B

BTWCE28

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock, and/or injury, these basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are familiar with the appliance.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance should be placed on a dry, level surface before it is operated.
- **INDOOR USE ONLY** – this appliance is not intended for outdoor use.
- Do not expose this appliance to rain or moisture. Do not immerse the appliance in water or any other liquid.
- This appliance is not intended for use in bathrooms, laundry areas or similar moist locations. Never locate this appliance in the immediate surroundings of, or where it may fall into, a bath, basin, washtub, shower or swimming pool.
- Do not place items filled with liquids, such as vases, on the appliance. Do not expose the appliance to dripping or splashing liquids.
- Do not place naked flame sources, such as candles, on the appliance.
- Do not locate the appliance or power cord near heat sources such as radiators, heaters, air ducts or direct sunlight.
- Do not block any of the ventilation openings. Ensure that vents are not covered by newspapers, tablecloths, curtains, etc. Do not install in a tight-fitting cabinet.
- Do not insert or allow foreign objects to enter any grill openings.

- Do not run the power cord under carpeting. Instead, arrange the power cord away from traffic areas where it will not become a trip hazard.
- To disconnect the appliance, switch off the power outlet and remove the plug from the power outlet.
- Do not misuse the power cord. Never carry the appliance by the power cord or pull to disconnect it from the outlet. Instead, grasp the plug and pull to disconnect.
- Do not operate the appliance if it has a damaged power cord or plug; after the appliance malfunctions; or has been dropped or damaged in any way. Consult an authorised service facility or similarly qualified person for examination.
- Do not open – do not attempt to repair, disassemble or modify this appliance.
- Dangerous high voltages exist inside this appliance.
- This appliance is only to be serviced by a qualified person. There are no user-serviceable parts inside.
- Do not use an extension power cord with this appliance.
- **Warning:** To avoid a hazard due to instability of the appliance, it must be fixed according to the instructions.

Warning

If the supply power cord is damaged, the power cord must be replaced by the manufacturer or its service agent or similarly qualified person in order to avoid hazard.

The plug must be accessible after installation of the appliance.

This product has not been designed for any uses other than those specified in this booklet.

Disposal Warning


When you dispose of refrigerators and freezers remove any doors. Children can suffocate if they get locked inside.

This refrigerator contains insulation formed with flammable blowing gases. Care must be taken when disposing of this appliance in order to avoid a hazard.

Keep ventilation openings, in the appliance enclosure or in the built-in structure, clear of obstruction.

Save These Instructions

Features of Your Wine Cellar

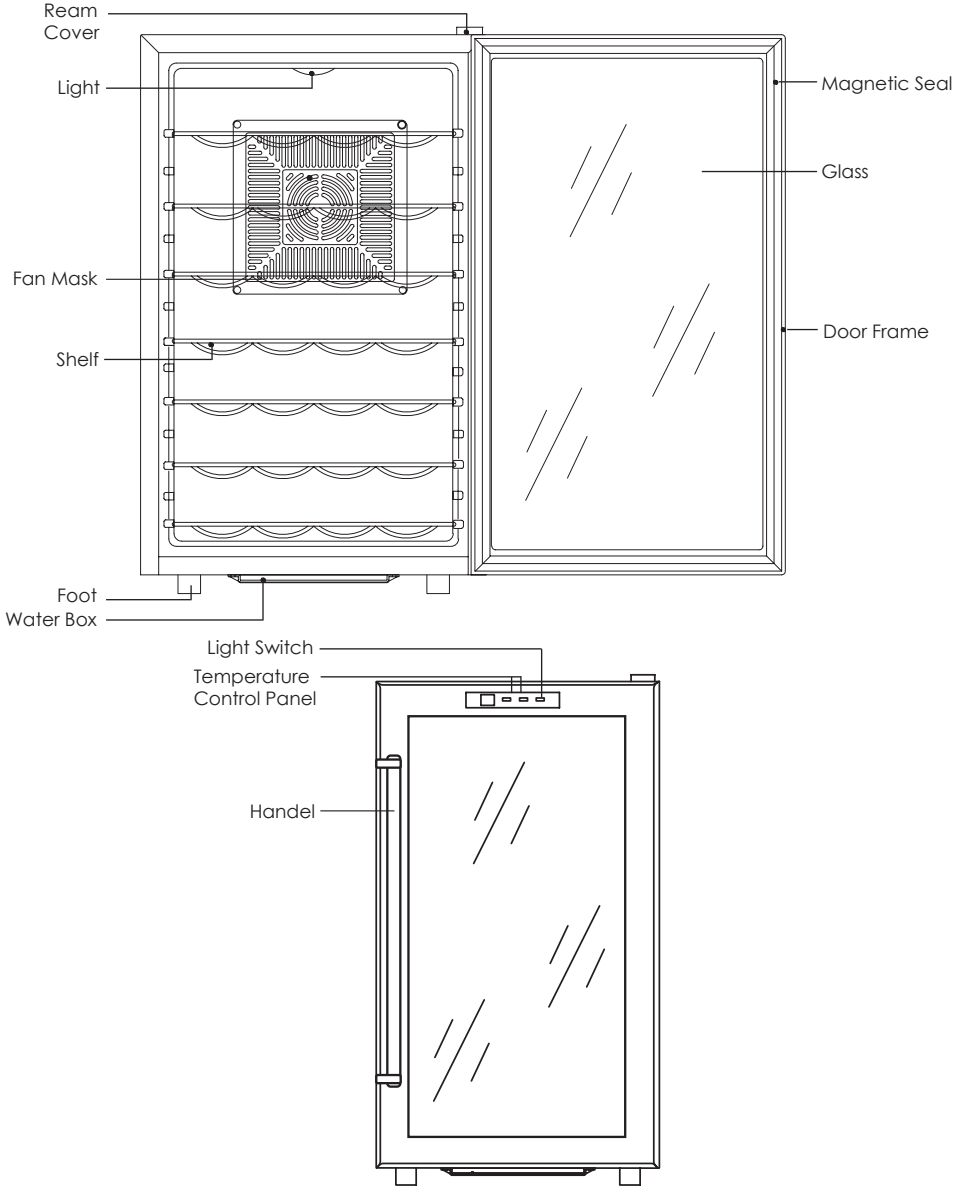

Correct positioning of your Wine Cellar

Handle Installation

1. Take out the handle from the cellar and remove the plastic bag.
2. Use the 2 screws provided to fix the handle on the left side of the door.

Well Ventilated

There is a need for good ventilation around the Wine Cellar for easy dissipation of heat, high efficiency for cooling and low power consumption. For this purpose, sufficient clear space is needed around the Wine Cellar with its back at least 50mm away from the wall, its sides at least 100mm away from walls and no less than 100mm space from the top. A clear space should be left to open its door to 160°.

Protection From Moisture

Avoid placing the Wine Cellar in a place where heavy moisture is present so as to minimize the possibility of rusting its metal parts. The Wine Cellar should not be directly sprayed with water as this could result in poor insulation and current leakage.

Protection From Heat

The Wine Cellar should not be stored near any heat source or direct sunshine. The temperature range of this Wine Cellar is highly dependent on where it is stored. The ideal conditions for this Wine Cellar is inside the household, away from direct sunlight, or high ambient temperatures.

Stable Installation

Place the Wine Cellar on a strong and level floor. Putting the Wine Cellar on carpet may cause a temperature rise. In such a case, place a hard wooden board or rubber mat between the carpet and the unit.

Moving

Before relocating or moving your Wine Cellar unplug the power cord, remove the contents and fasten the door with adhesive tape to prevent the door from opening while moving.

Technical Specifications

Model No.	BTWCE28
Volume	65L
Rate voltage AC	220-240V
Input power	70W
Rated frequency	50Hz
Tem control range	12-18°C
Net weight	22.8Kg
Gross weight	25.1Kg
Unit size (WxHxD)	460 x 735 x 540 mm

- Specification are subject to change without prior notice .
- If the specifications differ from the rating label, please refer to the rating label.

Operation of your Wine Cellar

Before Putting Into Use


Clean the appliance, and be thorough, especially in the interior.

Wine Storage Tips

For wine to last as long as the wine maker suggests it needs to be stored in the correct conditions. Badly stored wines may age prematurely, oxidise and become undrinkable in a very short period of time.

Your Wine Cellar has a variable temperature controller so you can use it to maintain wines at a constant temperature or you may choose to chill wines prior to serving.

Temperature Control

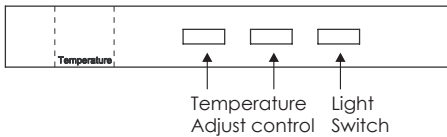

The temperature range for Wine Cooler is 12°~18°C.

When the temperature is set on one certain point and the temperature inside reaches this point, the automatic temperature control system begins to work and the cooling system goes into linear temperature keeping status.

Removable Shelves

The shelves can be moved up or down by sliding them out. This allows different sized bottles to be accommodated.

Note: There is a 4 to 6°C variance between the top and bottom shelves of the wine cooler. Therefore, if you want a mix of white and red wines, place the white wine bottles on the bottom rack and the red wine on the top shelves.

Tips For Energy Savings

Try not to open the door too often, especially if the weather is wet and hot. Once you open the door, close it as soon as possible.

Every now and then check if the appliance is sufficiently ventilated (adequate air circulation around the appliance).

Care and Maintenance

Troubleshooting

Cleaning the Wine Cellar

Unplug the unit, and remove all bottles. Wash the inside with a warm water and baking soda solution. (2 tablespoons of baking soda to a quarter of water.) Wash the shelves with a mild detergent solution. The outside of the wine cooler should be cleaned with mild detergent and warm water. It may be necessary to periodically wipe the bottom part of the storage area, as the wine cooler is designed to retain humidity, and condensation may collect there.

Power Failure

Most power failures are corrected within a few hours and should not affect the temperature of your wine cellar if you minimize the number of times the door is opened. If the power is going to be off for a longer period of time, take the proper steps to protect your contents.

Holiday Time

During long absences, remove all the bottles; unplug wine cellar, clean internally and leave the door slightly ajar to avoid possible formation of condensation or odors.

Moving the Wine Cellar

Remove all contents from the unit, securely tape all loose items inside the wine cellar, and the door shut. Ensure the leveling feet at the base of the unit are screwed in as tight as possible, and be sure the unit stays in an upright position during transportation.

PROBLEM	POSSIBLE CAUSE
Wine cellar does not operate.	Is the unit plugged in? The circuit breaker has tripped or blown a fuse.
Wine cellar is not cold enough.	Check the temperature control setting. The door is opened too often. The door is not closed completely. The door gasket does not seal properly. The wine cellar does not have the correct clearances.
The light does not work.	The home circuit breaker or fuse has tripped. The wine cellar is unplugged. The bulb has blown.
Vibrations.	Check to assure that the wine cellar is level.
The wine cellar seems to make too much noise.	Contraction and expansion of the inside walls may cause popping and crackling noises. The wine cellar is not level.
The door will not close properly.	The wine cellar is not level. The doors were reversed and not properly installed. The gasket is dirty. The shelves are out of position.

- Refer to the guide above if there is a problem. If the problem still cannot be answered please contact the manufacturer.

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028

Cat. No. BTWCE28
August 2012