

Bellini

OPERATION INSTRUCTIONS



Portable Induction Cooker
Model No.
BPI2100

Fineline: 206564

Thank you

Thank you for choosing Bellini Appliances.

This product will carry a 24 month replacement warranty.

For all warranty and technical queries please contact

Australia 1300 373 199
New Zealand 0800 764 912

Content

Safety instructions -----	2
Product description -----	3-4
Start using your appliance-----	5-6
Maintenance -----	7-8
Warranty -----	9-10

Safety Instructions

This manual explains the proper operations & instruction of your appliance, please read it carefully before using even if you are familiar with the product. The manual should be kept in a safe place for future reference. All Bellini Appliances are for domestic use only.

Warning


General Safety

- To protect against the risk of electric shock, DO NOT IMMERSE any part of this appliance in water or any other liquid or allow liquid to go into the cabinet and get short/contact inner electrical parts, the power cord must be plugged out before cleaning.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Switch off the power outlet and remove the plug before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the power cord. Never carry the appliance by the power cord.
- Do not operate any appliance with a damaged power cord or plug; or if the appliance malfunctions.
- Do not allow the power cord to hang over the edge of a table or counter, or touch hot surfaces.
- Operate on a dry level surface; sinks, drainboards or uneven surfaces must be avoided. Place the unit on a level surface, the distance between it and its background surrounding must be not less than 10cm
- Do not operate the unit on the gas stove or metal surface to avoid any danger.
- Please do not place paper, cloth or other articles under the bottom of the pan to get heated, to avoid the danger of fire.
- Do not place the unit on the cloth, carpet to avoid blocking the ventilation slots of device.
- Do not cover ventilation slots with anything during cooking, otherwise it will cause danger.
- Do not use this appliance for anything other than its intended use. This product is intended for household use only.
- Do not use with an extension power cord.
- Do not operate or place any part of the appliance on or near any hot surfaces (such as a hot gas or electric burner, or in a heated).
- The cooking zones will become hot when you cook. Therefore, always keep small children away from the appliance.
- Allow to cool before cleaning or storing.
- Do not use outdoors.
- Store the unit indoors in a dry location
- Do not attempt to repair, disassemble or modify the appliance. There are no user serviceable parts.
- Do not operate under or near flammable materials, Such as curtains, Drapes and any other combustible materials.
- The appliances are not intended to be operated by means of an external timer or separate remote-control system.


Disposing Of The Device

When disposing of the device, do not bring it to regular municipal waste containers. Instead, bring it to electrical and electronic waste recycling and reuse center. A relevant label has been put on the device, its instructions manual, or the package. The device has been manufactured of recyclable material. By bringing old device to recycling collection center, you show that you care about nature. Ask your local environmental care authority for information on location of such facilities.

Product Configuration

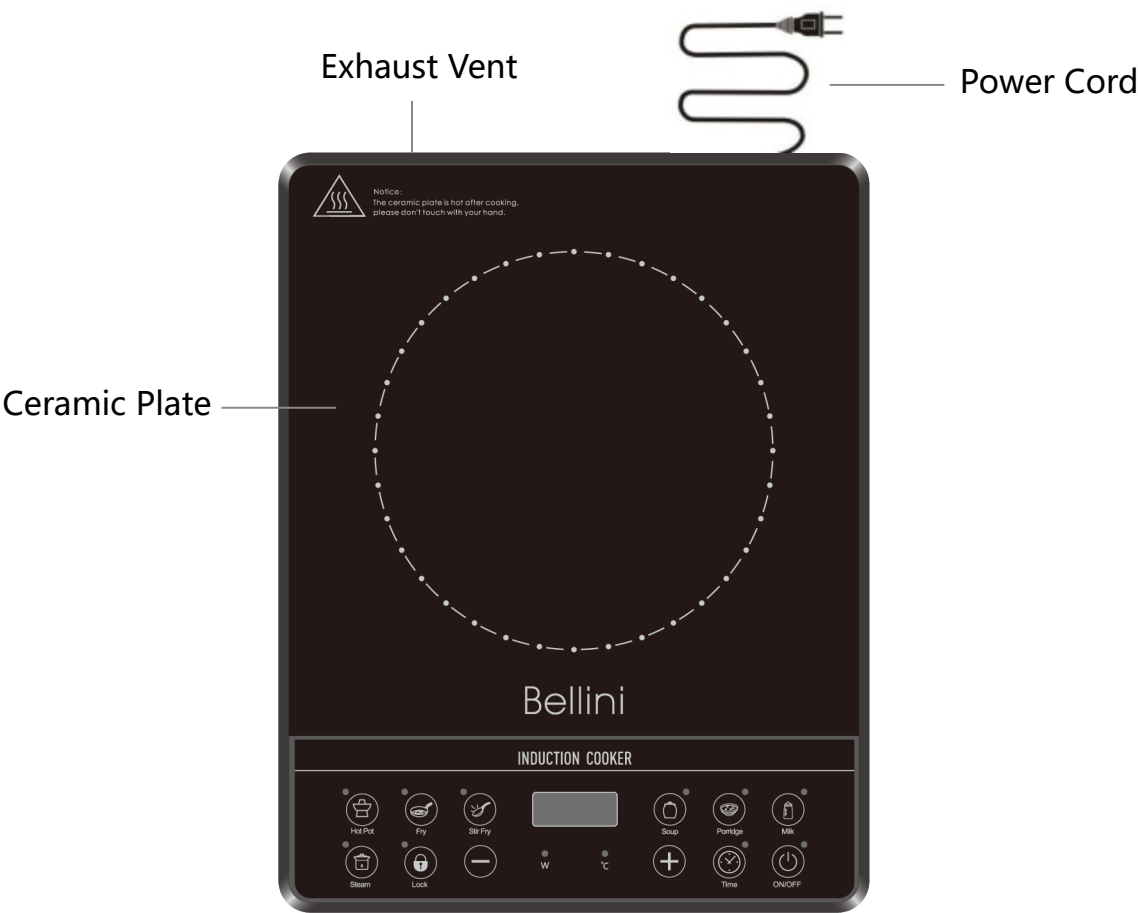

Control Panel

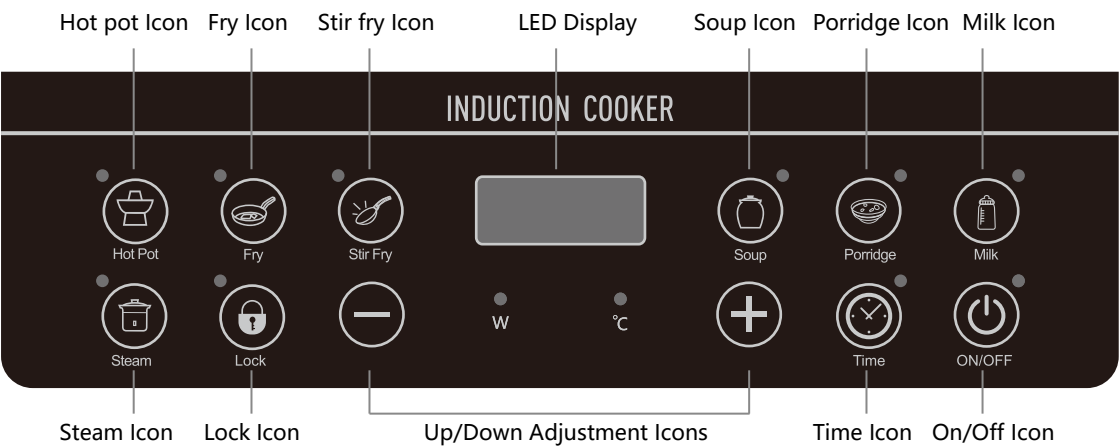

Safety Caution

Warning :

If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

1. Metallic objects such as knives, forks, spoons and lids should not be placed on the hotplate since they can get hot.
2. Never touch the device and the power plug with wet hands.
3. Do not connect the device to the same outlet with other devices, to reduce the risk and damage, this plug should be fit into an individual outlet. The rated electrical current is not less than 10A.
4. Do not touch the plate while the unit is working, to avoid getting burned.
5. Do not move the induction hotplate during cooking or with hot cookware on top of it.
6. Do not place any empty containers on the device.
7. Please kindly avoid hitting the plate of the unit, in case of getting cracked, should turn off the unit and plug out immediately, and then contact with service points of our company.
8. Do not cook with an empty cookware, it will cause malfunction or danger
9. Do not place any metal objects on the device.
10. Do not touch the control panel with any sharp implements.
11. Do not heat sealed food such as canned goods before opening their covers.
12. Never use the device when it does not function properly, shows damage or in case it was dropped.
13. Do not leave the device unsupervised during operation. Keep children and other incompetent persons as well as persons under influence of drugs or alcohol away from the device.
14. Do not attempt to repair this appliance in the event of a failure.
15. Scientific tests have proven that induction hotplates do not pose a risk. However, persons with a pacemaker should clear with their doctor whether to take care of some special handling advises.

WARNING

If the power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

2. Product operating instructions

After inserting the plug into the socket, a “Beep” will emit and all the indicator lights and display will light up for 2 seconds, indicating the appliance in connection with a power source, known as standby mode. At this time, the indicator of [On/Off] will flash. Place a suitable cookware on the center of the cooking zone. The display shows [ON] when [On/Off] key is pressed once, the appliance goes to selection mode and the indicator above [On/Off] remains light-up. Press the corresponding function keys to start operation. Stop the operation and switch to standby mode by pressing [On/Off] key after cooking.

2. Cooking Mode

2.1 Hot Pot: Press [Hot pot] key and the indicator of [Hot pot] and [W] light up, display will show [2100] representing that the default power is 2100W. User can press [+] or [-] to adjust 8 power levels from 300W to 2100W. To cancel this mode, user can press other function keys or [On/Off] key to stop the operation.

2.2 Fry: Press [Fry] key and the indicator of [Fry] and [°C] light up, display will show [200] representing that the default temperature is 200°C. User can press [+] or [-] to adjust 8 temperature levels from 60°C to 240°C. To cancel this mode, user can press other function keys or [On/Off] key to stop the operation.

2.3 Stir-fry: Press [Stir-fry] key and the indicator of [Stir-fry] and [W] light up, display will show [2100] representing that the default power is 2100W. User can press [+] or [-] to adjust 8 power levels from 300W to 2100W. To cancel this mode, user can press other function keys or [On/Off] key to stop the operation.

2.4 Soup: Press [Soup] key and the indicator of [Soup] and [W] light up, display will show [AU] representing that the appliance works under default power level, where it can not be adjusted. To cancel this mode, user can press other function keys or [On/Off] key to stop the operation.

2.5 Porridge: Press the [Porridge] key and the indicator of [Porridge] and [W] light up, display will show [AU] representing that the appliance works under default power level, where it can not be adjusted. To cancel this mode, user can press other function keys or [On/Off] key to stop the operation.

2.6 Milk: Press [Milk] key and the indicator of [Milk] and [°C] light up, display will show [AU] representing the appliance works under default power level, where it can not be adjusted. To cancel this mode, user can press other function keys or [On/Off] key to stop the operation.

2.7 Steam: Press [Steam] key and the indicator of [Steam] and [W] light up, display will show [0:30] representing that the appliance works under default power level, where it can not be adjusted. The default operation time is 30 minutes. A “Beep” will emit, and the appliance will stop the operation and return to standby mode. To cancel this mode, user can press other function keys or [On/Off] key to stop the operation.

3. Timer function (Only for mode Hop pot, Fry and Stir fry):

User can set the cooking time when power mode is selected. Press the [Time] key once to access the timer function, the indicator will light up. Display will show [0:01], user can slide left or right to set the desired time, left for hour and right for minute. The time can be adjusted from 1 minute to 2 hours 59 minutes. After setting, user can press [Time] key once to confirm or wait until the display stop flashing. After the “Beep” signal, the appliance will stop the operation and change to standby mode automatically when the end of the countdown. To cancel this function, user can hold the [Time] key for 3 seconds.

4. Lock Function:

To activate the child lock, user can press the [Lock] icon. This will lock the appliance and no operation allowed except [On/Off] key. Hold for 3 seconds to unlock.

3. Selection of Cookware

3.1 Material required:

- ✧ Steel, cast iron, enameled iron, stainless steel, flat-bottom pans/pots with bottom diameter from 12cm to 26cm.
- ✧ So suggest to use the required pot, do not try to use other pot instead (especially pressure sensors vessels.)



Stainless steel pot



Cast Iron pan



Magnetic stainless
steel pan



Magnetic stainless
Iron pan



Cast Iron fry pan

3.2 Please kindly according to the below requirement if necessary, to use the vessel is not equipped.

- ✧ Pan/pot must be suitable for induction cooker.
- ✧ Pan/pot should be tried out if it is suitable/compatible for use, E1 error code does display if cookware material does not meet above displayed criteria (E.g Stainless Steel pan with copper or aluminum base plate).
- ✧ Pan/pot must be flat and come with lids that have steam vents incorporated into the lid.

4. Maintenance and Daily Care

1. Remove the power plug prior to cleaning the unit. Do not clean it until the surface cools down.
2. Glass plate, panel and the shell:
 - ① Soft cloth for slight stain.
 - ② For greasy, dirt, blot by using a clean damp cloth with neutral detergent.
3. When the appliance cooling fan operates, dust and dirt deposits around the vent holes on the back and right hand side of the appliance, ensure that these vent holes are cleaned,
4. Remember do not wash the unit with water directly to avoid damaging.
5. To protect induction cooker, be sure to have a good contact between plug and socket before using.
6. Do not pull out the power cord directly during operation. To extend the appliance's using life, press the "ON/OFF" button first, switch power OFF at power outlet and only then pull out power cord from power outlet.
7. After pressing the ON/OFF button to turn appliance OFF, the cooling fan will still operate to cool the appliance down, only unplug appliance when fan has stopped and appliance has cooled down where it is safe to touch.
8. Please pull out the power cord and store appliance when not used for a long time.

5. Troubleshooting and Treatment

During operations, if any error occurred, please check the following table before calling for service. Below are common errors and the checks to perform.

Symptoms	Check points	Remedy
After connecting the power and pressing the "power" key, the appliance has no response.	Is the wall power outlet switched ON?	Use after resuming the electricity.
	Is circuit breaker on fuse box switched OFF?	Check the root causes carefully. If the problem cannot be fixed, please contact Consumer Service Hotline
	Is the plug connected firmly?	
Heating being interrupted in normal use and a "Beep" will be heard.	Incompatible cookware or no cookware is used? E1 error message displayed.	Replace compatible cookware for the induction cooker.
	Is the cookware not considerably placed form the center of the heating zone?	Place the cookware at the center of the defined heating zone.
	Is the cookware being heated but continually being removed?	Place a cookware inside the heating zone.
No operation during the heating being in use.	Is the cookware empty or the temperature too high?	Please check whether the appliance is being misused.
	Is the air intake/exhaust vent clogged or dirt has accumulated?	Remove the stuff clogging the air intake/exhaust vent. Operate the appliance again after cooling down.
	Is the cooker working over 2 hours without any external instruction?	Reset cooking modes or use timer function.

Error codes occur.	E0 Internal circuit error E1 Without cookware or Incompatible cookware used E2 Internal overheat E3 Over-voltage E4 Under-Voltage E5 Top plate sensor open/short circuit E6 IGBT sensor open circuit/short circuit E7 Top plate overheat	When showing error signal E1, E2 and E7, please check whether the cookware is not suitable, or switch on the appliance again after it is cooled down naturally. When showing E0, E3-E6, Please contact Consumer Service Hotline
--------------------	---	---

If the above remedies/controls can not fix the problem, unplug the appliance immediately, contact Contact Consumer Service Hotline

6. Product Specifications

Model	BPI2100
Rated Voltage	220-220V~50/60Hz
Power	2100W

WARRANTY

- 1.1 In this warranty:
 - 1.1.1 Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010;
 - 1.1.2 **Company** means GSM Retail Australia Pty Ltd ABN 53 007 682 475 of 142-144 Fullarton Road, Rose Park SA 5067. Telephone 1300 373 199. Email admin@gsmretailgroup.com
 - 1.1.3 **Consumer** means a “consumer” as that term is defined in Section 3 of the Australian Consumer Law as the original purchaser of a Bellini product;
 - 1.1.4 **Consumer Guarantees** means the guarantees under the Australian Consumer Law;
 - 1.1.5 **You** means the Consumer.
- 1.2 Nothing in this warranty affects any person’s rights under the Australian Consumer Law. The benefits to any Consumer under this warranty are in addition to the rights and remedies available under any Consumer Guarantees.
- 1.3 Subject to the other clauses of this warranty, the Company warrants to the Consumer that the Bellini product will be free of manufacturing defects and will perform to the Company’s specifications.
- 1.4 The benefit of this warranty extends only to the Consumer as original purchaser of a Bellini product
- 1.5 This warranty commences on the date of purchase of the Bellini product by the Consumer and continues for the benefit only of the Consumer until the expiry of two (2) year (**Warranty Period**).
- 1.6 If within the Warranty Period a manufacturing defect is discovered in the Bellini product or it fails to perform to the Company’s specifications as a result of some defect in materials, components or workmanship (Defect) then the Company will, at its option, supply a replacement Bellini product free of charge. A replacement Bellini product may differ from the original product purchased by the Consumer.
- 1.7 This warranty will not apply to any Bellini product:
 - 1.7.1 Subjected to misuse, neglect, negligence or accidental damage; or
 - 1.7.2 Operated in any way contrary to any operating or maintenance instructions; or
 - 1.7.3 Improperly handled, installed or maintained; or
 - 1.7.4 Altered or modified prior to or after installation; or
 - 1.7.5 Damaged directly or indirectly by power surges, electrical storm damage or connection to
 - 1.7.6 incorrect power supplyIndustrial and or Commercial usage is inclusive of staff areas in office/ shop environments, hotel/ motel or other similar accommodation or rental type properties including Bed and Breakfast establishments.
- 1.8 You must provide proof of your purchase of the Bellini product and the date of purchase in order to obtain the benefit of this warranty.

The Australian Consumer Law requires the inclusion of the following statement with this warranty:

Our goods come with guaranteed that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure.

IN ORDER TO MAKE A CLAIM UNDER THIS WARRANTY THE CONSUMER MUST CALL 1300 373 199 (AUSTRALIA)

DO NOT SEND IN THIS WARRANTY

Fill out the following details and file with your purchase invoice.

RETAIN & FILE WITH YOUR RECEIPT

Your Purchase Receipt/Invoice is proof of date of purchase.

GSM Retail Australia Pty Ltd reserves the right to discontinue items, modify designs and change specifications without incurring obligation.

Whilst every effort is made to ensure that descriptions, specifications and other information in this publication is correct, no warranty is given in respect thereof and the company shall not be liable for any errors therein.

Purchased from:

Co. Name:

Address:

Date of Purchase:

Serial number:

NOTE: Consistent with our continuing product development policy, improvements may have been made which render the contents of this packaging slightly different to that shown.

**FOR WARRANTY CALL 1300 373 199 (AUSTRALIA)
0800 764 912 (NEW ZEALAND)**

