

Important Safeguards

When using electrical appliances, in order to reduce the risk of fire, electric shock and/or injury to persons, basic safety precautions should always be followed:

For Your Safety

Read all instructions carefully, even if you are quite familiar with the appliance.

- The blades and discs are very sharp, handle with care. Always hold the blade from the top, away from the cutting edge when handling and cleaning.
- To protect against the risk of electric shock DO NOT IMMERSE motor unit, plug and power cord into water or any other liquid.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory and mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Never leave an appliance unattended when in use.
- Children should be supervised to ensure that they do not play with the appliance.
- Do not touch any moving parts.
- Keep hands and utensils away from moving blades or discs while processing food to reduce the risk of severe injury to persons or damage to the food processor. A scraper may be used but must be used only when the food processor is not running.
- To reduced the risk of injury, never place cutting blade or disc on base without first putting bowl properly in place.
- This appliance is intended for processing small quantities of food for immediate consumption. It is not intended to process large quantities of food at one time.
- Do not operate the appliance when empty.
- Switch off and remove the plug from the power outlet before cleaning or when not in use. To unplug, grasp the plug and pull from the power outlet. Never pull the the power cord and never carry the appliance by the power cord.

- Do not operate any appliance with a damaged power cord or plug after the appliance malfunctions, or is dropped or damaged in any manner.
- Ensure the bowl and lid are fitted correctly and securely before operating the appliance.
- Never feed food by hand. Always use the food pusher.
- Remove cutting blade from bowl before tipping contents of bowl out. (Do not touch the blades as they are sharp).
- Do not attempt to override the Bowl Lid lock safety mechanism.
- Do not use outdoors.
- Store unit indoors in a dry location.
- Do not let the power cord hang over the edge of a table or counter, or touch hot surfaces. Do not operate or place any part of this appliance on or near a hot gas or electric burner or in a heated oven.
- The use of attachments or accessories not recommended or sold by the manufacturer may cause fire, electric shock or injury.
- Operate on a level surface. Operating on sinks, drainboards or uneven surfaces must be avoided.
- Do not use any appliance for anything other than its intended use. This product is intended for household use only.
- Do not attempt to repair or disassemble the appliance. There are no user serviceable parts.

Warning

If the power cord is damaged, the power cord must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

This product has not been designed for any uses other than those specified in this booklet.

Save These Instructions

Features of Your Stick Mixer Set



Getting to Know Your Stick Mix Set

Congratulations on the purchase of your new Bellini Stick Mix Set.

Before using your new Stick Mix Set for the first time, it is extremely important that you read and follow the instructions in this Use and Care booklet, even if you feel that you are familiar this type of appliance.

In particular, please pay close attention to section entitled IMPORTANT SAFEGUARDS. Find a safe and convenient place to keep this booklet for future reference.

This appliance has been designed to operate from a standard domestic power outlet. It is not intended for industrial or commercial use.


Before Using the Stick Mix Set for the First Time

Carefully unpack the unit and remove all packaging material. Wipe the motor unit with a damp cloth. Wash the shaft, mixing blade and all the accessories in warm soapy water.

Take care not to submerge the motor unit in the water. Ensure it is thoroughly dry.

Pay careful attention to the sharp blades.

How to use the hand blender

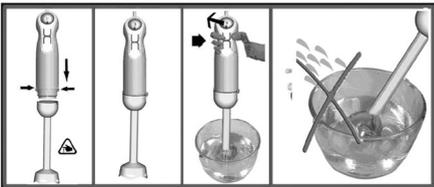

The hand blender is perfectly suited for preparing dips, sauces, soups, mayonnaise and baby food as well as for mixing and milkshakes.

1. When preparing food always use a large and high sided container.

PLEASE NOTE: The 800mL Beaker is only heat resistant up to 80-90°C. Always allow boiling foods or liquids to cool down before starting to blend.

2. Ensure that the appliance is unplugged.
3. Insert the motor unit into the blending shaft until it locks. Always ensure that the shaft has locked firmly in place and does not move.
4. Connect the plug to the power outlet.
5. Adjust the variable speed control to the desired speed.

NOTE: The Variable Speed Control is only available for Power Button I.

6. Lower the Stick Mixer into the food. It is normal to expect food to splash during operation. When processing hot foods or liquids always ensure the appliance is not held in the rising steam – this will prevent condensation from reaching the motor housing. If condensation does appear on the motor housing please remove immediately with a cloth.
7. Hold on to the container and press the Power button I or II to start the motor. Slowly move the Mixer up and down during operation.

Caution: When blending soft foods do not use the appliance for longer than one minute at a time.

When blending hard foods do not use the appliance for longer than 10 seconds.

Always allow the blender to rest for 3 minutes before using again.

Do not chop extremely hard food, such as nutmeg, coffee beans.

Tip: Use a pulsing, on/off action when blending to achieve the best results.


8. Watch the consistency of the food while using the Mixer and regularly check the blade and blade guard for clogged food. Use a rubber scraper to carefully remove any obstruction after switching the power off at the wall outlet.
9. When you have finished blending, Release the Power button and wait until the motor has stopped before lifting the Mixer out of the food.

- Always unplug the appliance immediately after use. Lay down the appliance on a flat, dry surface where it can not fall.

NOTE: After blending very salty meals, you should rinse the Mixer blades with clean tap water immediately after use to avoid discolouration and corrosion of the blending shaft.

WARNING: Always release the Power button, wait until the motor has completely stopped and unplug the appliance before assembling or dismantling the blending tool.

How to Use the Whisk

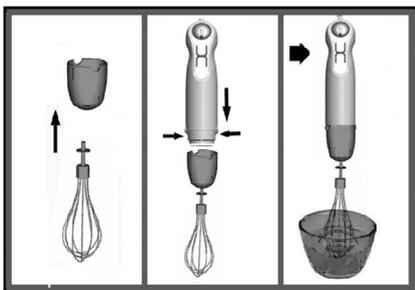


Use the whisk only for whipping cream, beating egg whites and mixing sponges and Ready-mix desserts. Do not use any fragile containers with the appliance. It is recommended to use high sided and medium sized stainless steel or plastic containers like the one provided.

- Insert the Whisk into the whisk holder firmly, then Insert the motor unit into the Whisk gear box until it locks.
- Before pressing either power button I or II to begin whisking, immerse the whisk in the food (up to half of its height) to avoid excessive splashing and dripping of liquids onto the appliance.
- During operation, do not allow the whisk from touching the interior walls of the container.
- Always wait until the motor has stopped completely and unplug the appliance before lifting the whisk out of the food.
- When you have finished whisking, detach the gear box from the motor unit by pressing the Release Buttons. Finally pull the whisk from the gear box

- Do not touch the whisk with your hands or any objects (ie hair, clothes etc) when the appliance is connected to the mains power supply.
- Clean the appliance in accordance with the instructions in the Care and Cleaning section. Do not leave any food to dry on the appliance.

Caution: Do not use the whisk continuously for more than 1 minute at a time to avoid overheating. Let the appliance cool down to room temperature before you continue processing.

How to Use the Slicing/ Shredding

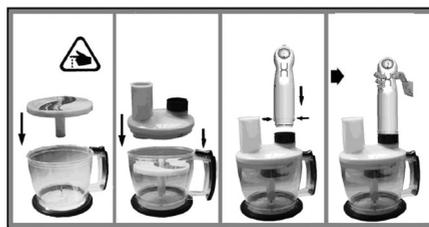

For preparing a maximum of 500g of foodstuffs at once (no meat).

Slicing: potatoes for gratins dauphinois, carrots, cucumbers, etc.

Shredding: grated carrots, celery.

- Put the blade "S" into the blade -holder disc. place the blade -holder disc onto the spindle in the middle of the bowl.
- Press down and hold the Lock part on the top of the handle. Turn the lid in clockwise until it locks into position.
- Put the motor unit in place then start the appliance.
- Put the foodstuffs into the feeder tube and guide them using the pusher, never your fingers, or a utensil.
- Always unplug the appliance immediately after use.

How to Use the chopper



Chopper is perfectly suited for hard food, such as chopping meat, cheese, onion, herbs, garlic, carrots, walnuts, almonds, prunes etc.

Don't chop extremely hard food, such as ice cubes, nutmeg, coffee beans and grains.

Before chopping...

1. Carefully place the blade onto the central spindle in the bowl, holding it by the plastic part. **Caution: the blade is very sharp!** Always hold it by the upper plastic part. Always place the chopper bowl on the anti-slip base.
2. Put the foodstuffs into the bowl, never fill the bowl above the maximum limit indicated.
3. Insert the motor unit on the chopping bowl lid until it locks.
4. Press the Power button to operate the chopper. During processing, hold the motor unit with one hand and the chopper bowl with the other.
5. After use, unplug the appliance immediately, remove the motor unit from the chopping bowl lid by pressing the Release buttons.
6. Then remove the chopping bowl lid, carefully take out the blade.
7. Don't operate hard food for no longer than 10 seconds.

Care and Cleaning

- **WARNING:** To avoid injury and damage to the appliance, always turn the appliance off, wait for the motor to stop completely and unplug the appliance immediately after operation and before dismantling or cleaning the appliance.
- Do not touch the assembled blending tool with your hands or any other object whilst the appliance is connected to the power supply.
- The Mixer blades are very sharp – DO NOT TOUCH THE BLADES. To handle the blending tool always grasp the shaft.
- Do not place the appliance or power cord in a dishwasher.
- Do not immerse the motor housing or power cord in any liquids or spill any liquids on it. Always wipe off any spilled liquids immediately.
- Do not use abrasive cleaners, cleaning pads, corrosive chemicals, disinfectants, bleach or any sharp or hard objects i.e metal scouring pads, for cleaning as this could damage the surface. Carefully clean the appliance and the container with a damp sponge or cloth with warm soapy water. Soak any stubborn residues on the processing tools in warm soapy water for approx ten minutes and then remove any remaining residue with a soft washing brush.
- Remove the processing tool: Hold on to the motor housing with one hand and grasp the shaft with the other hand. Press the Release Buttons to release the lock. Remove the processing tool.
- Clean the processing tool (Mixer blades) with a soft nylon washing brush and warm soapy water. Rinse the processing tools thoroughly under running water.
- Thoroughly dry the motor housing and all parts of the appliance after each cleaning and before assembling the appliance. Leave all parts to dry naturally.
- Be sure that the unit is unplugged before cleaning.
- It is recommended that the appliance be washed immediately after use.
- It is suggested that the shaft is detached from the motor housing before the cleaning commences.

Processing Guide (for chopping bowl)

Food	Maximum	Operating time	Preparation
meat	200g	15sec	1~2cm
herbs	50g	8sec	
nuts, almonds	150g	15sec	
cheese	100g	10sec	1~5cm
bread	75g	8sec	2cm
onion	150g	8sec	half
biscuits	150g	8sec	1cm
soft fruit	200g	10sec	1~2cm
Egg	4 eggs	15sec	

G | S | M

Gerard Sourcing & Manufacturing

GSM International Ltd.

Consumer Service Centre : 1300 373 199

GSM International Ltd has a policy of continual improvement throughout the product range.
As such the unit contained within may differ slightly from the unit illustrated on the pack.

MADE IN CHINA for GSM International Ltd.



N1028

Cat. No. BTSMS595
December 2011